



A Simple Processor

1. A simple Instruction Set Architecture
2. A simple microarchitecture (implementation):
Data Path and Control Logic

Motivation

Software

```
int x = y * 2;
```


```
int p = q & 0x0000FFFF;
```

```
for (int i = 0; i < 10; i++) {  
    ...  
}
```

How do we connect these?

Hardware


ALU with Adder (compute)

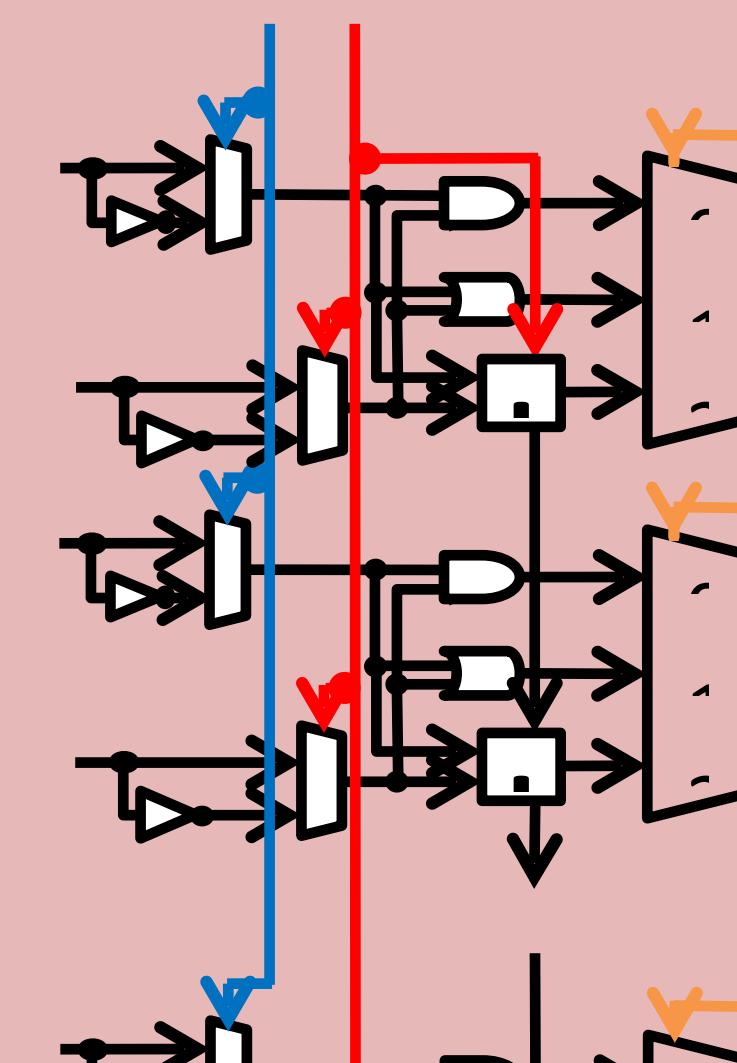

Registers (local data storage)



RAM (larger/longer data storage)

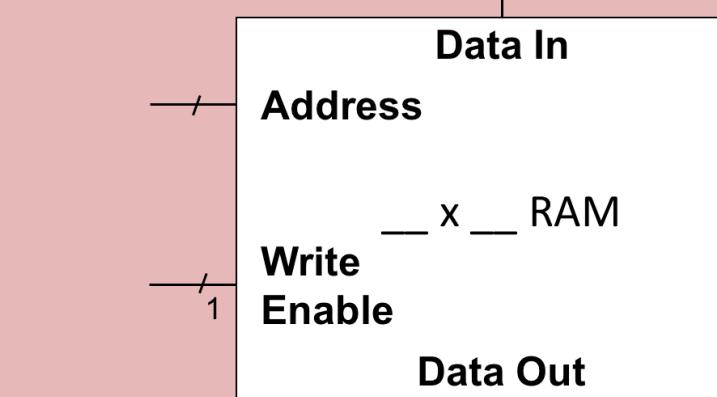

Software

Program, Application

Programming Language

Compiler/Interpreter

Operating System

connection

Instruction Set Architecture

implementation

Microarchitecture


Digital Logic

Devices (transistors, etc.)

Hardware

Solid-State Physics

Instruction Set Architecture (ISA)

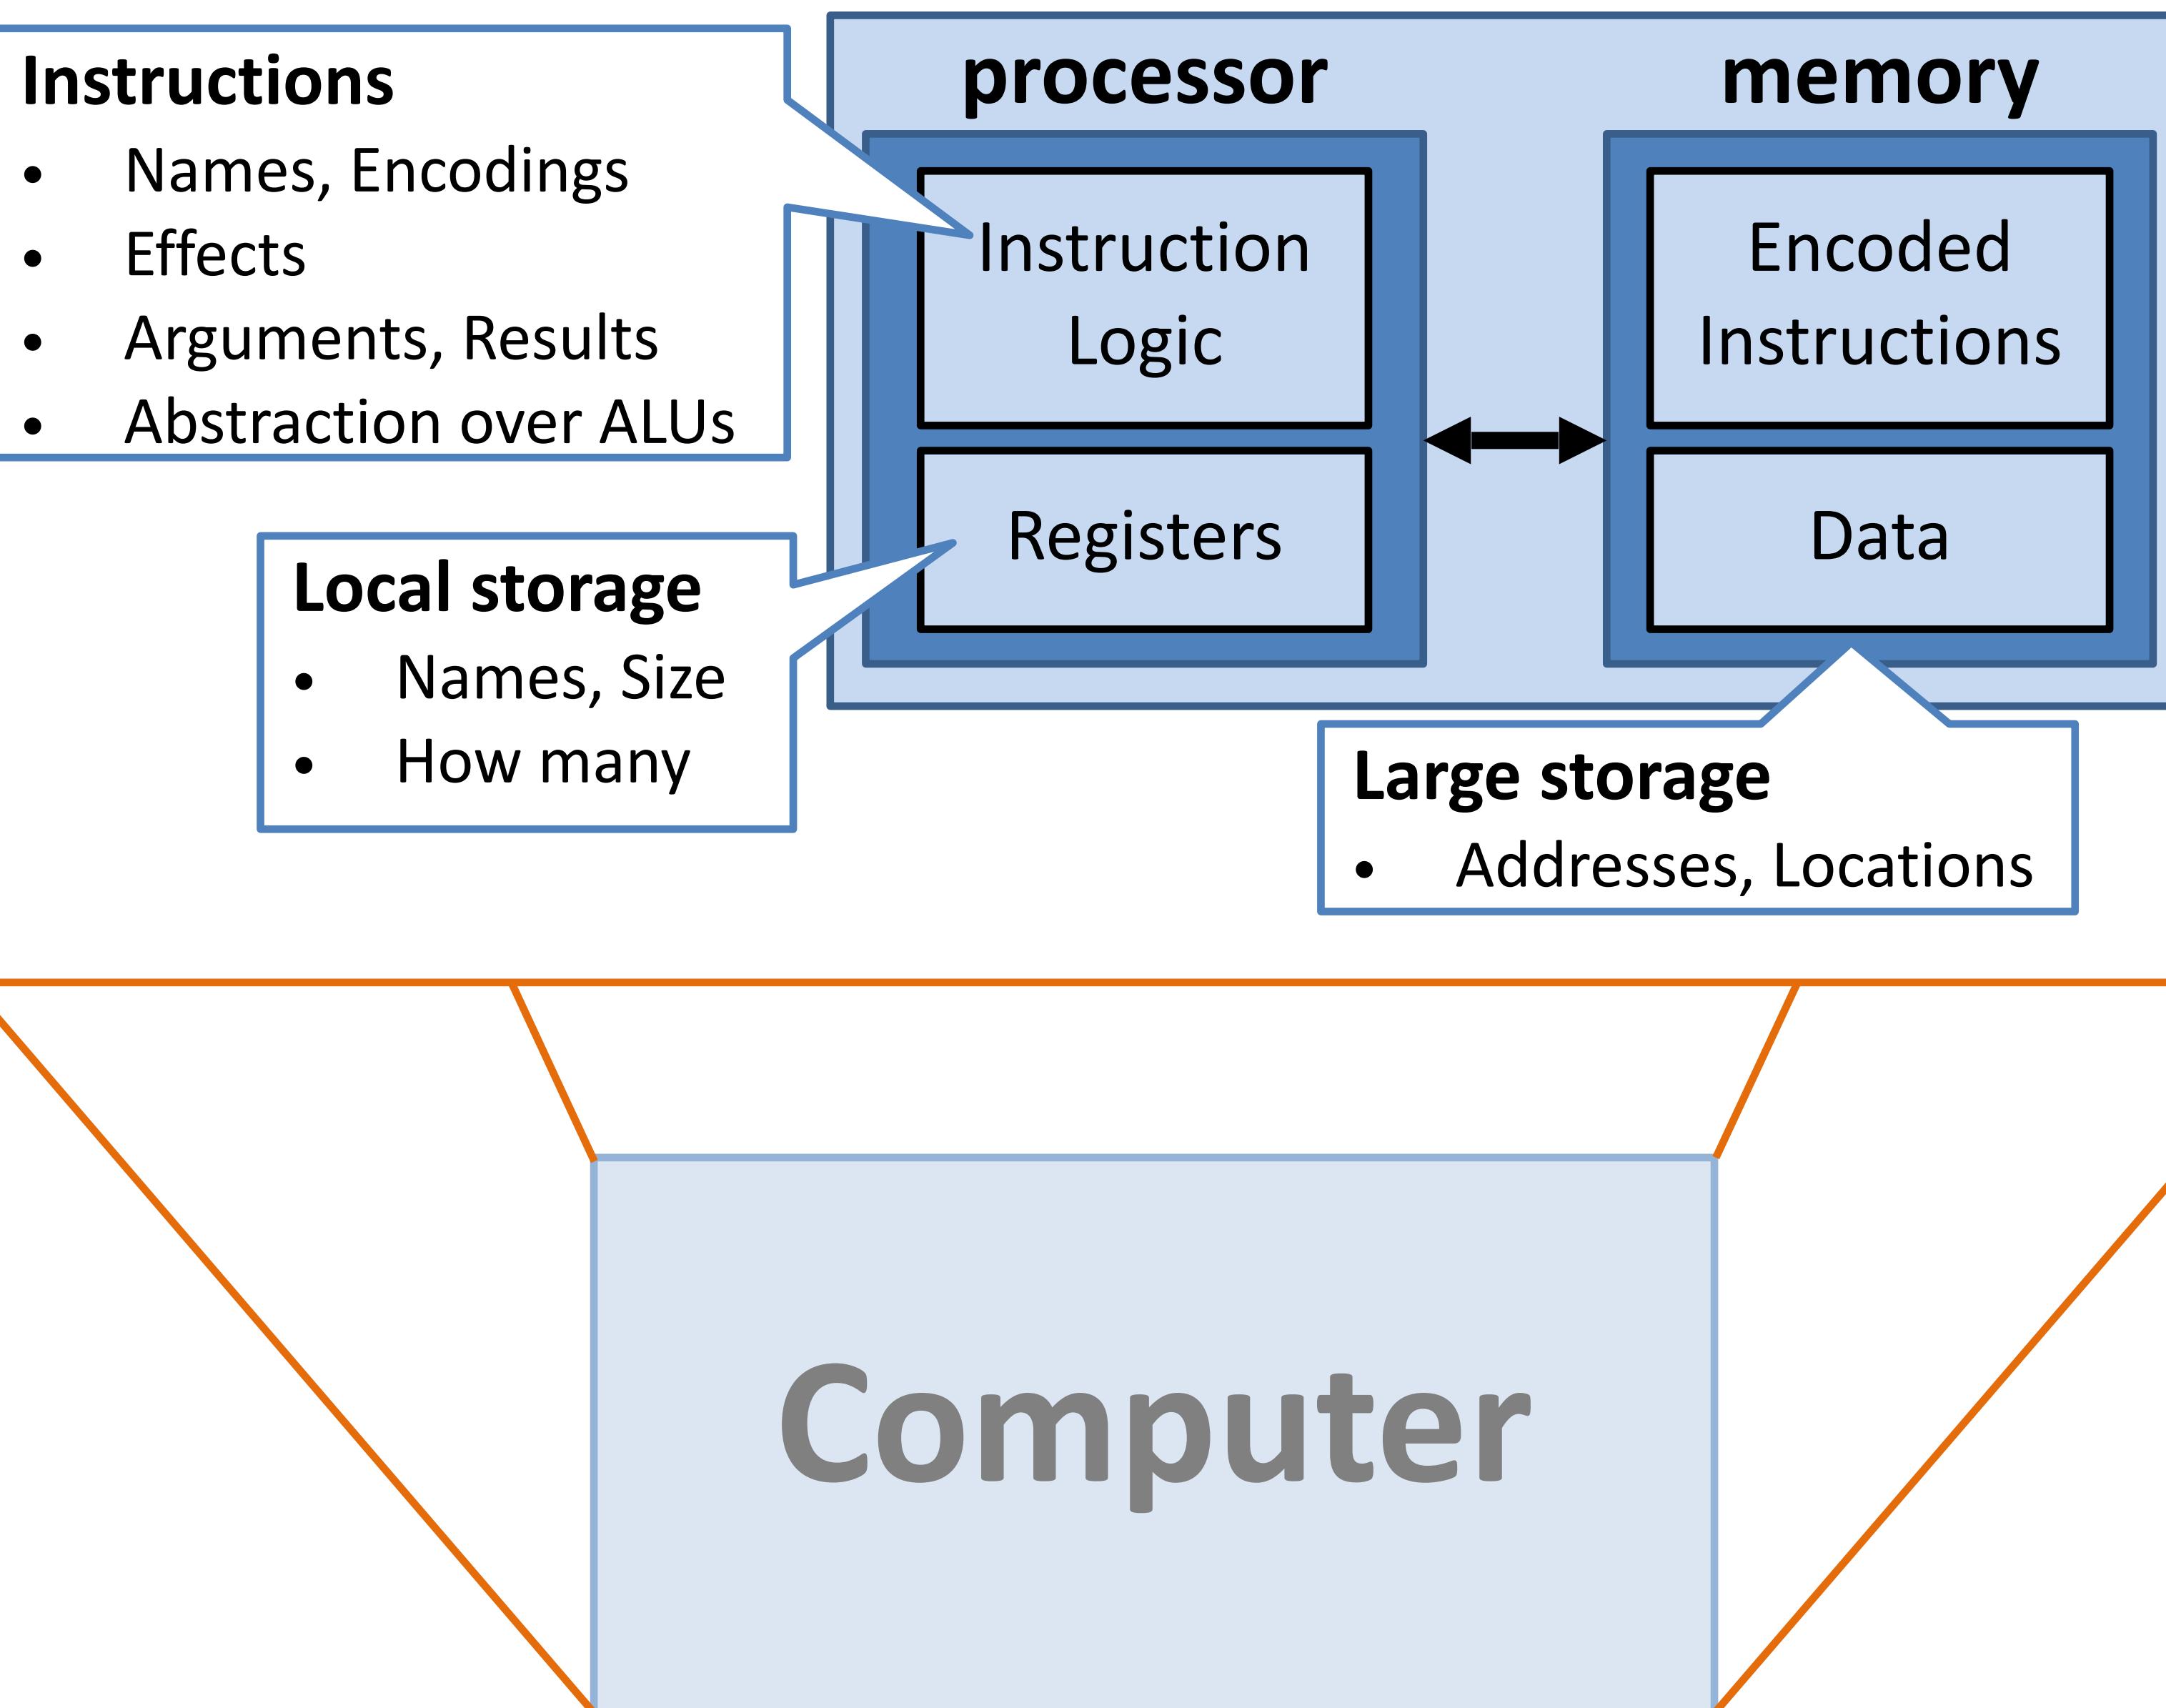


ISAs define the *interface*
between software and
hardware

Computer

ISAs are an abstract model of the underlying hardware.

Microarchitecture (**Implementation** of ISA)

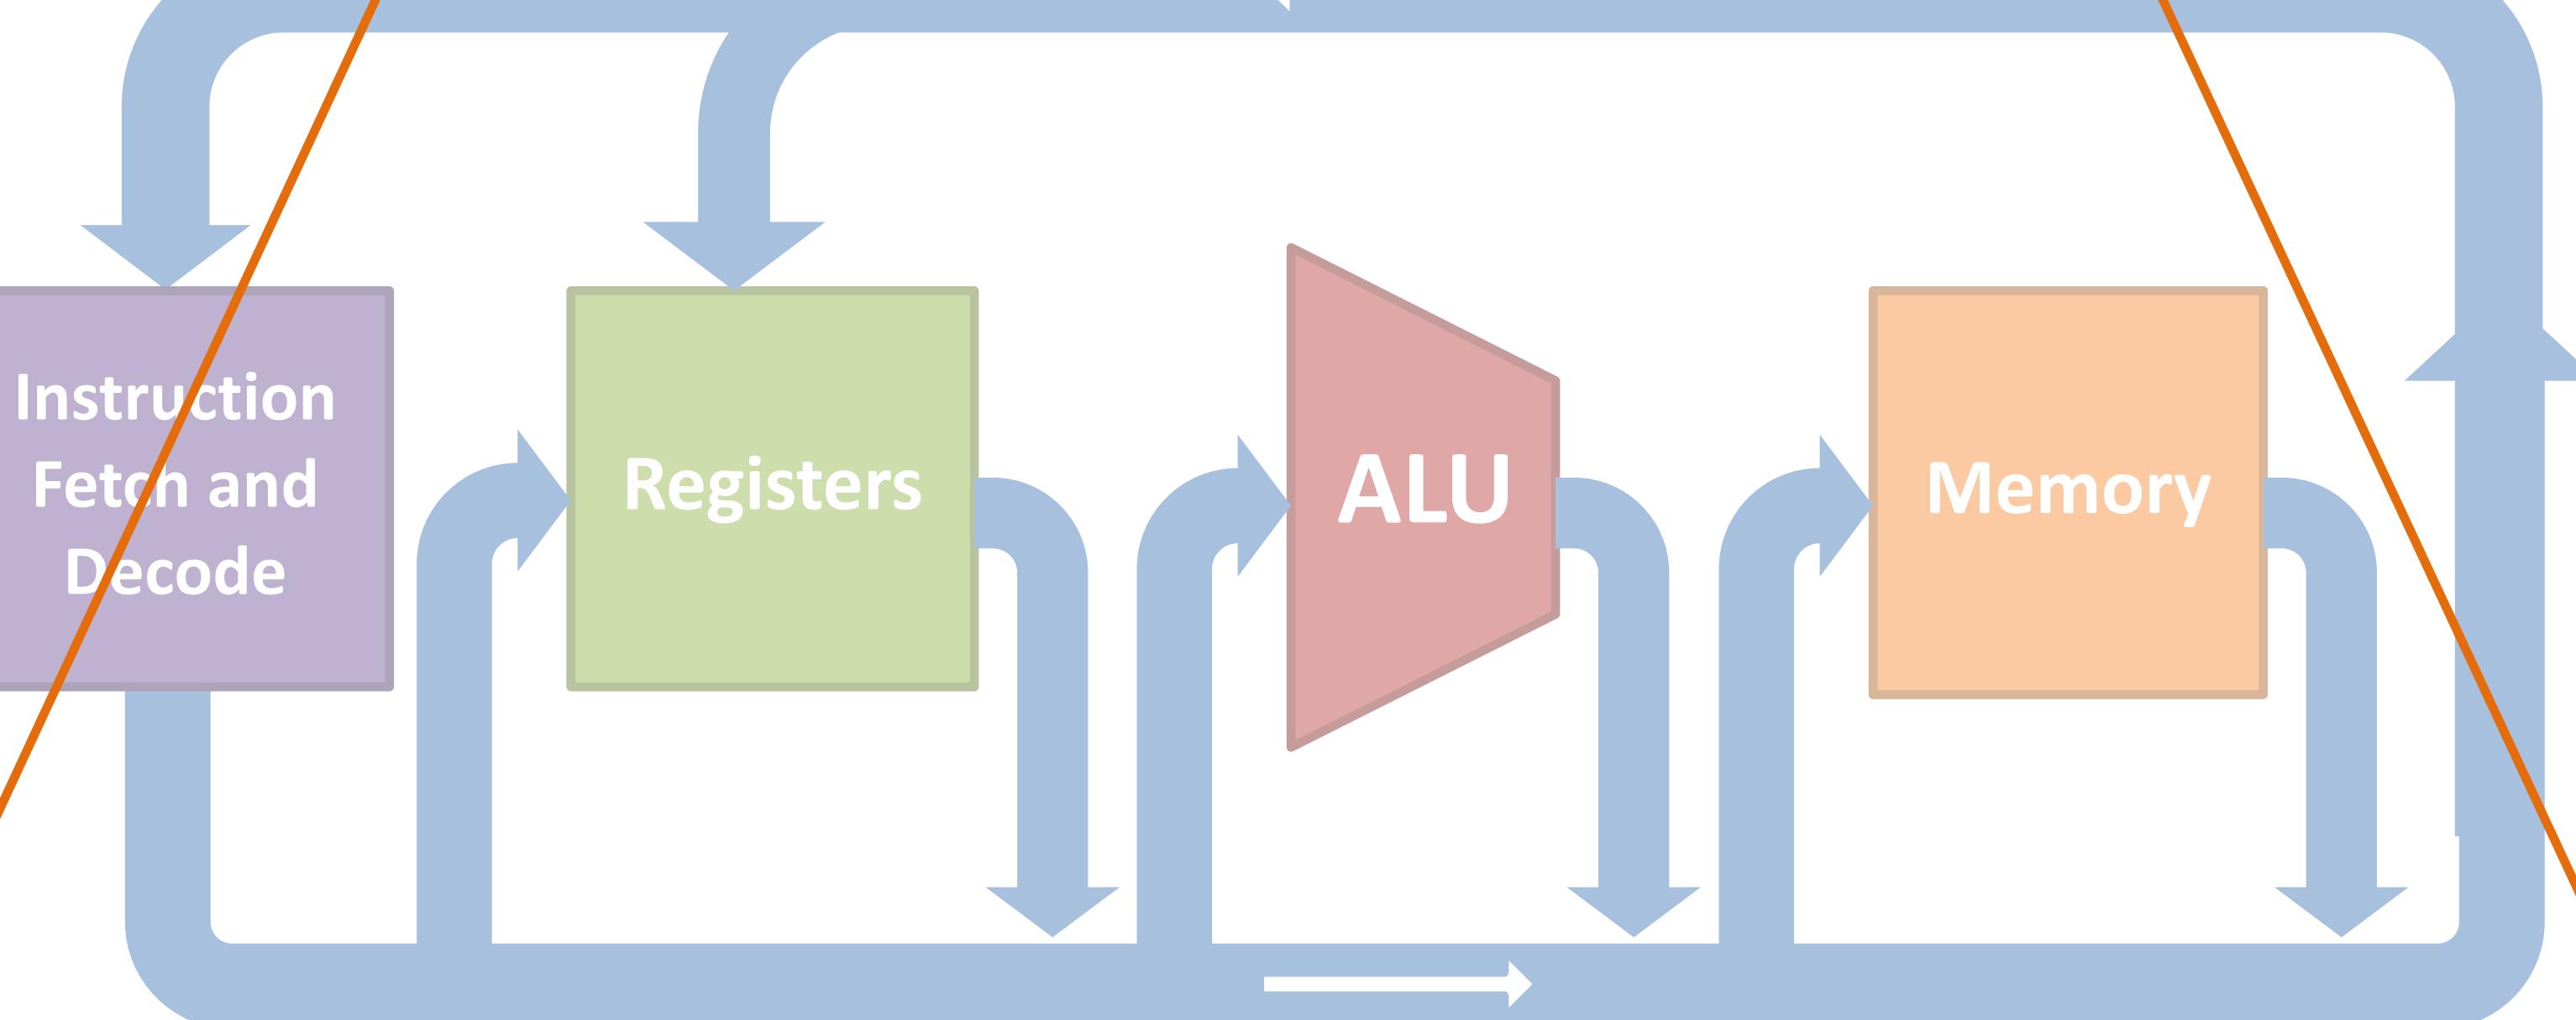


This week:

HW ISA

An *example ISA* and
hardware implementation
for CS240!

Basic building block of an ISA: *the instruction!*

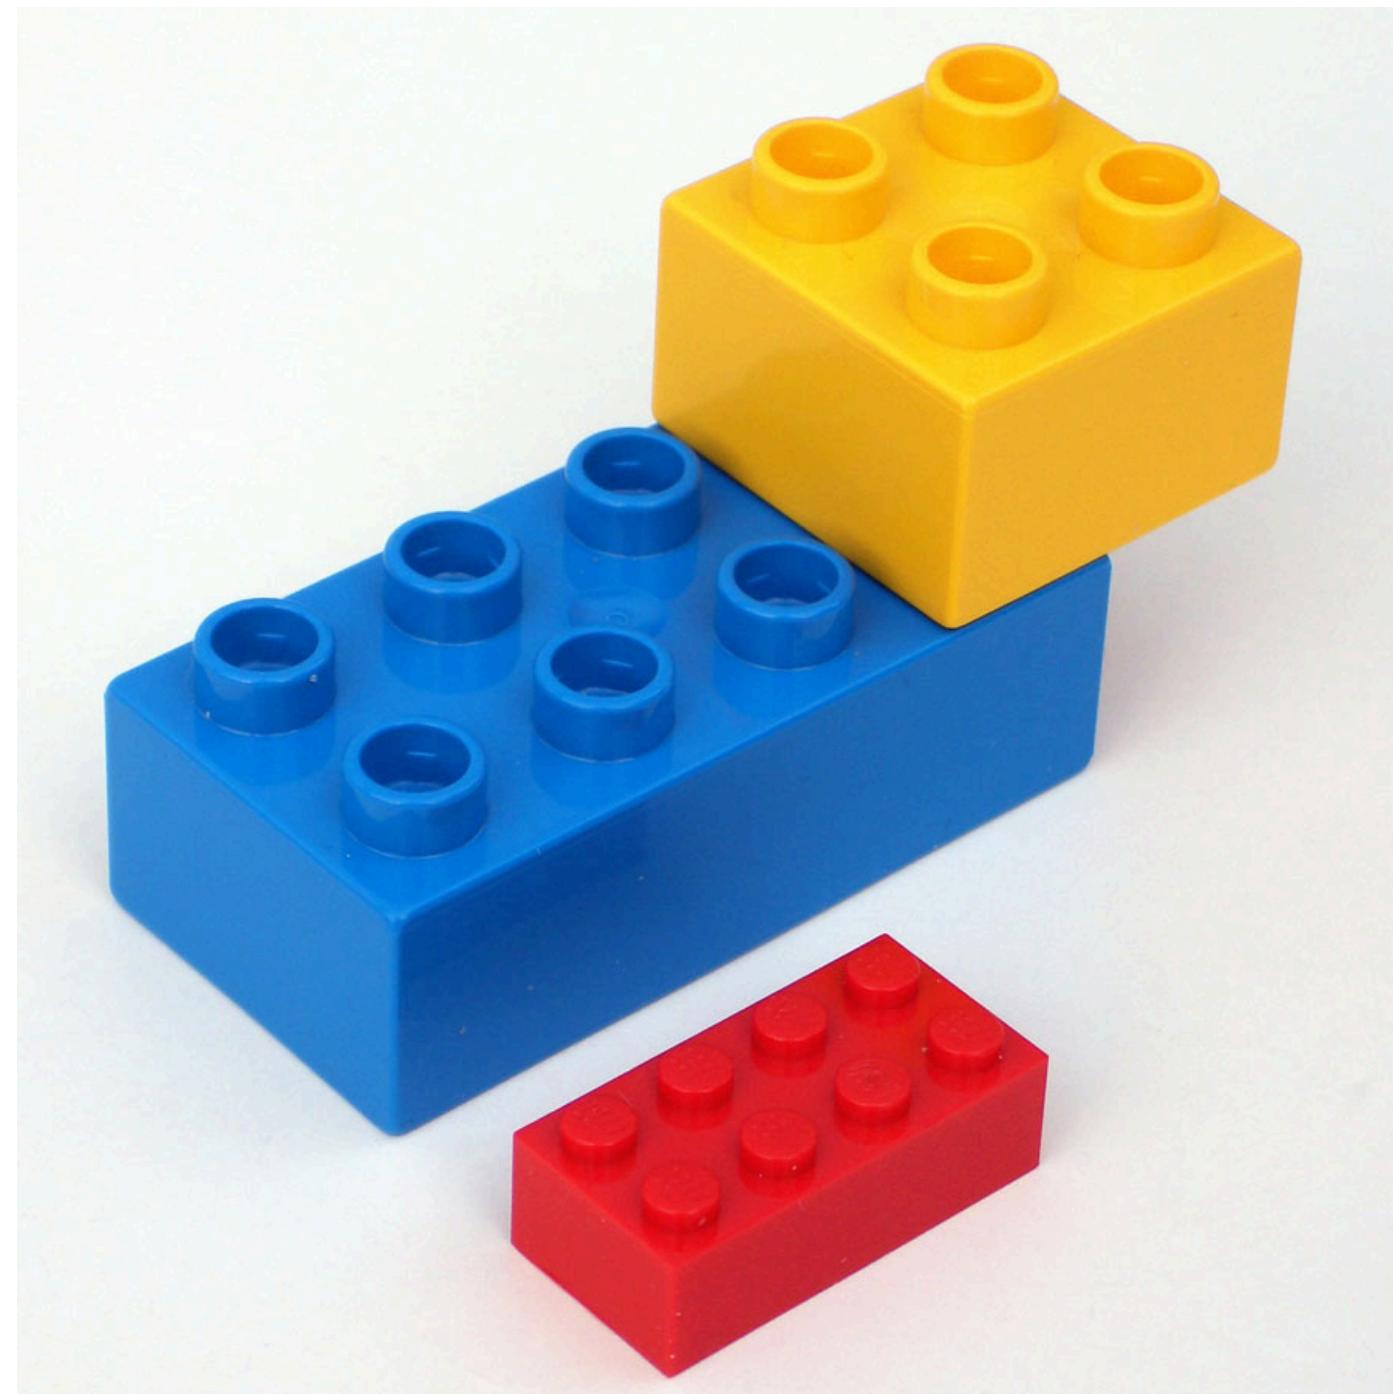

ISAs are an abstract
model of the underlying
hardware.

This week:

HW ISA

An *example ISA* and
hardware implementation
for CS240!

HW ISA Summary (details to follow)


Word size = 16 bits (2 bytes)




- Register size = 16 bits
- Number of registers = 16
- R0 always holds 0
- R1 always holds 1.




- ALU computes on 16-bit values.

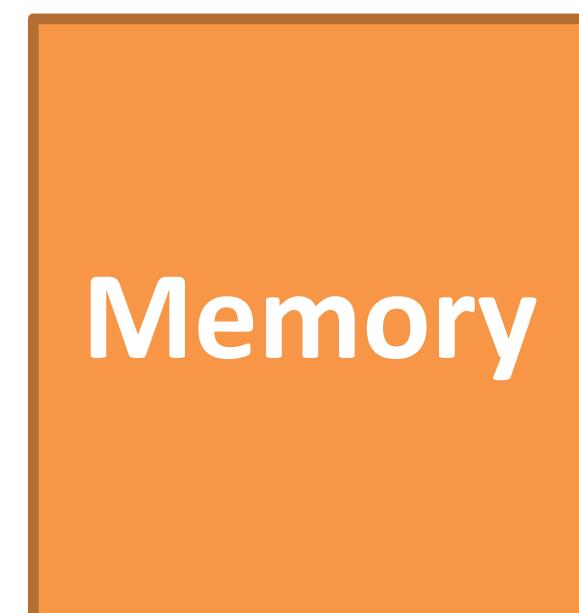


- Access 16 bits at once
- Byte-addressable (new address every 8 bits)

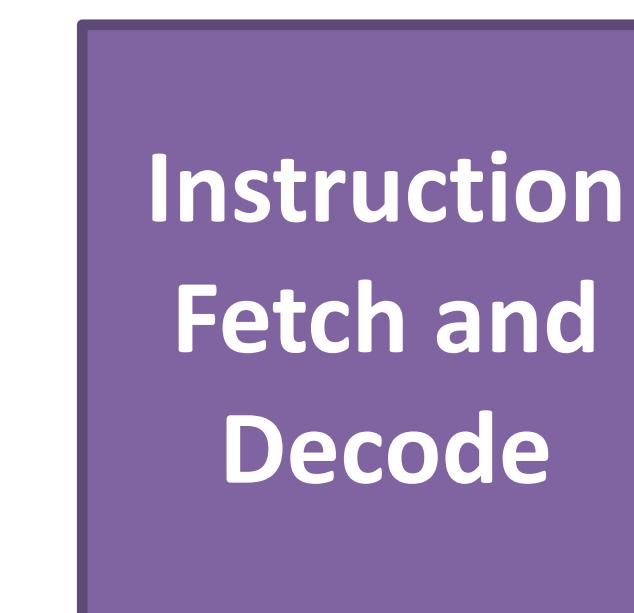

- Instructions are 16 bits in size
- Stored in separate memory
- **Program counter (PC)** register holds address of next instruction

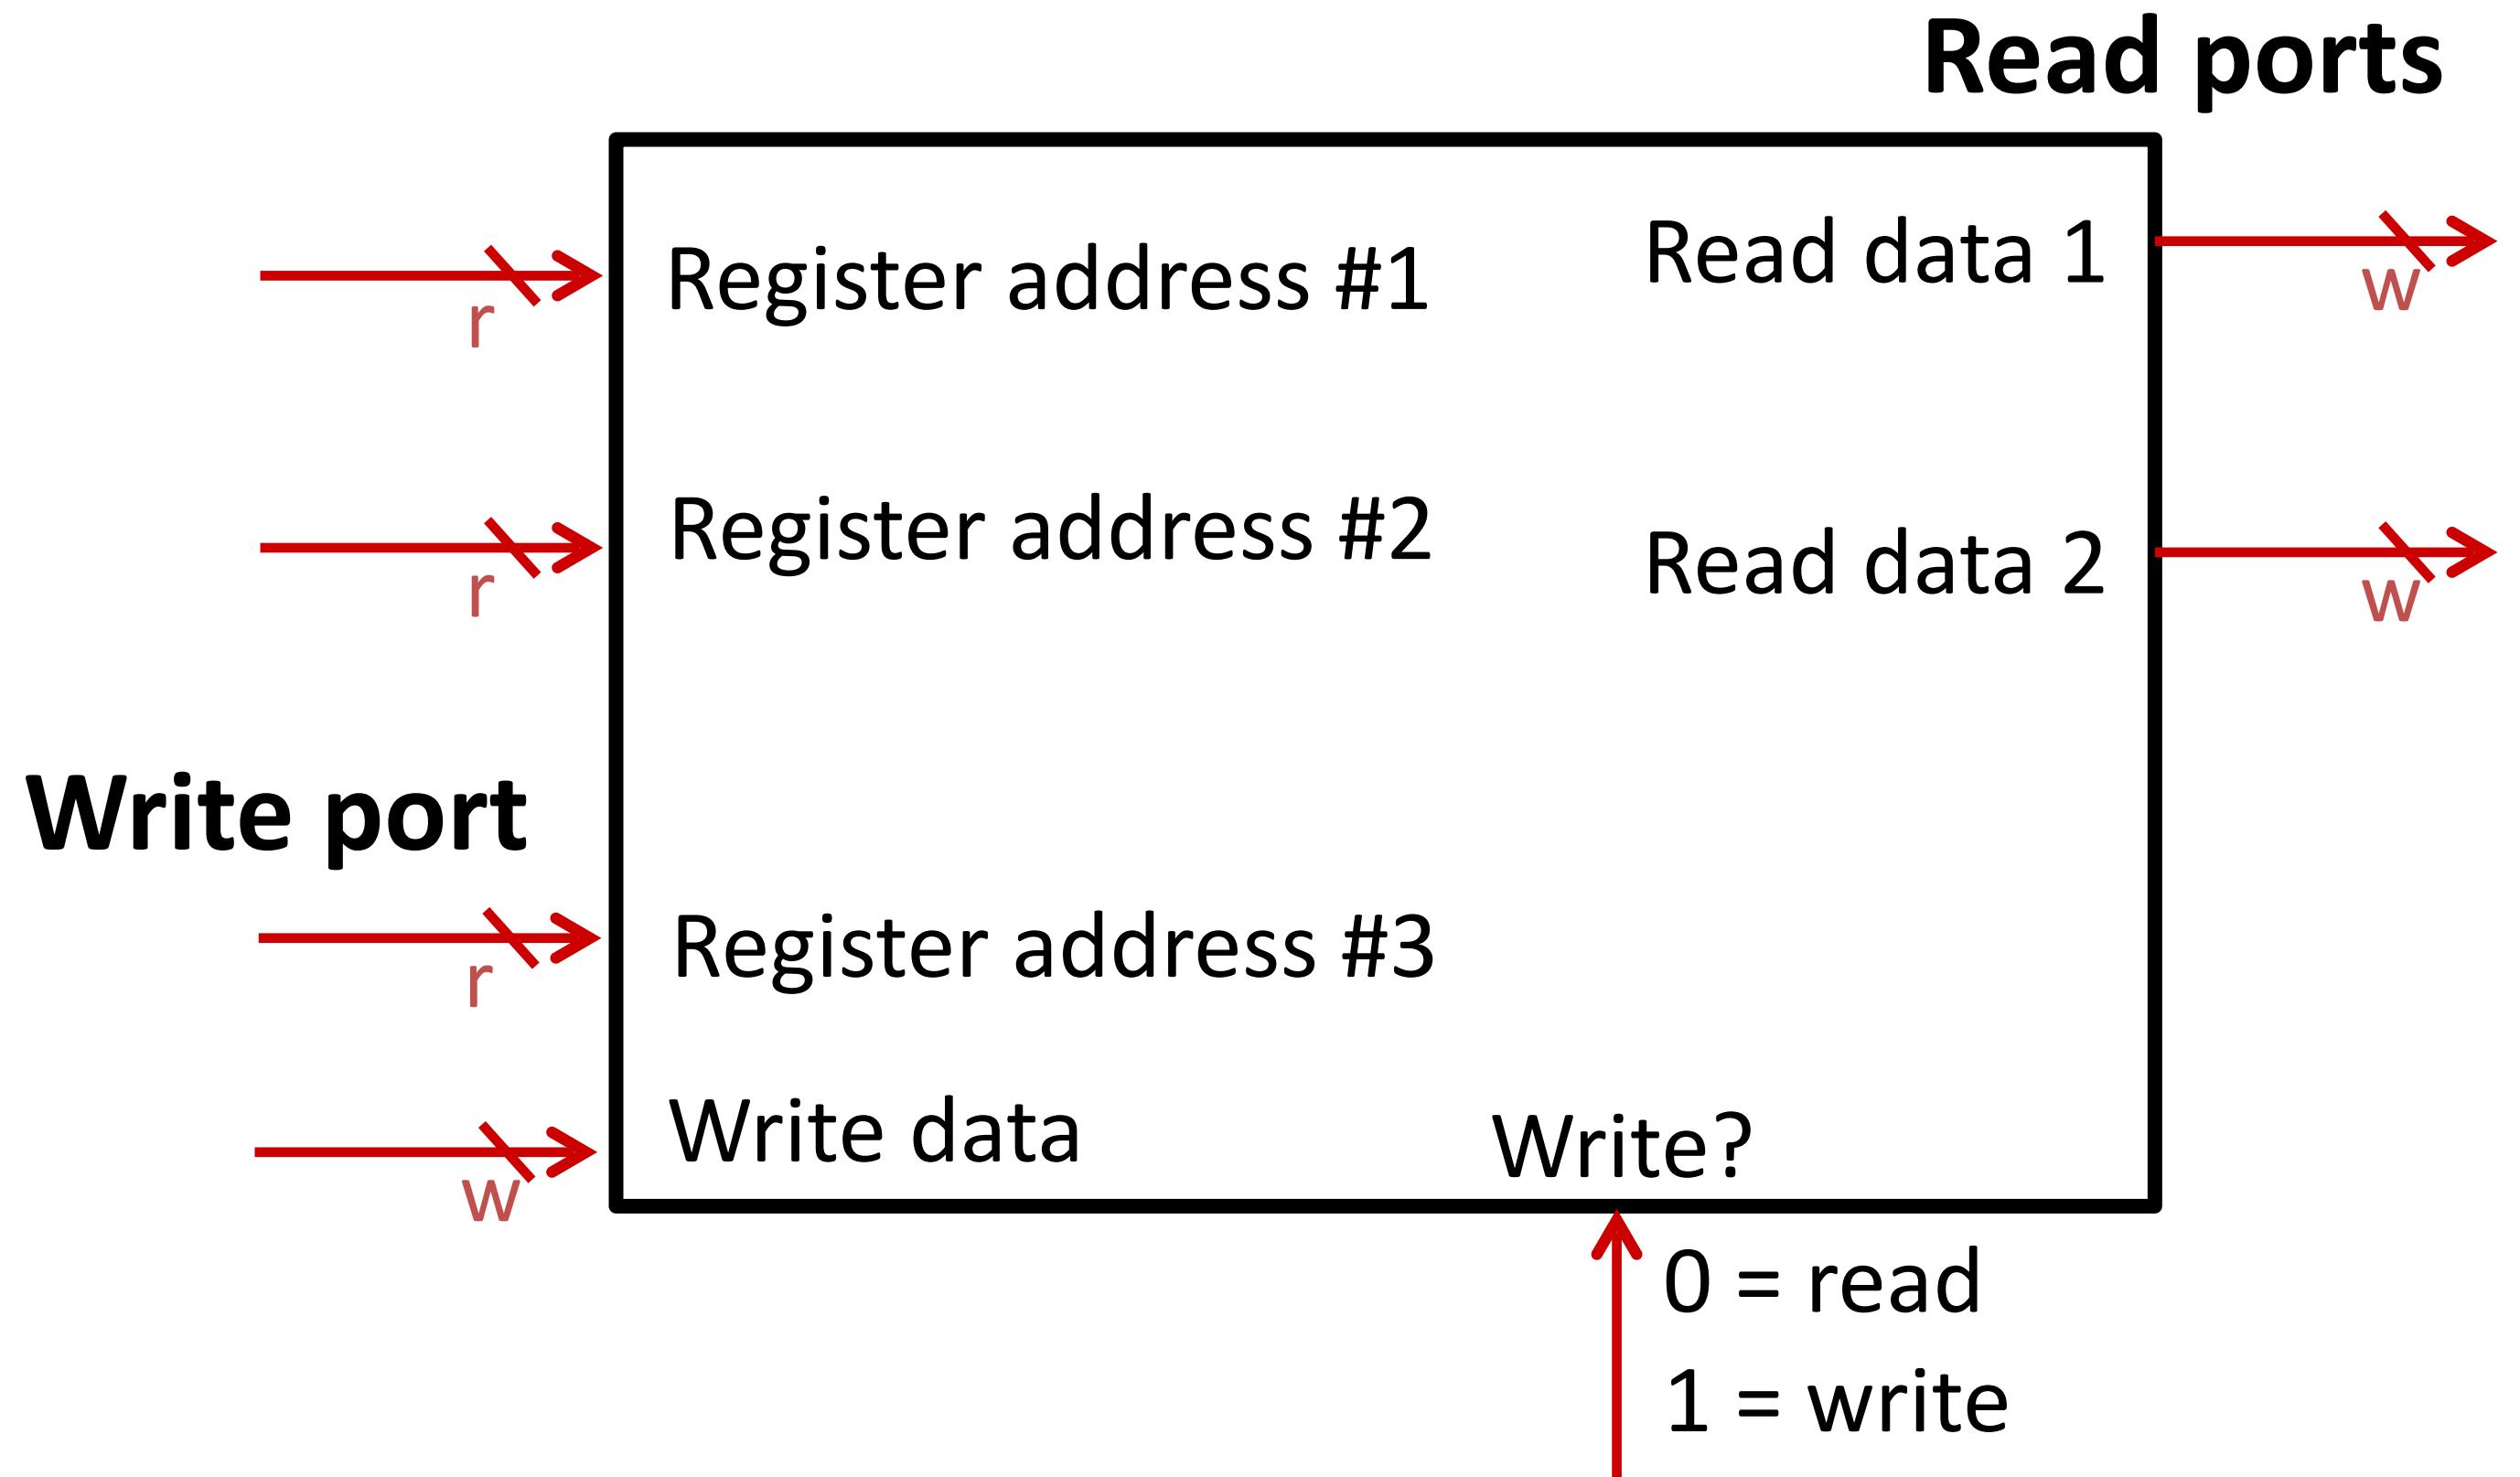

Using your understanding of powers of 2 needed to make selections, how many bits should be on the labeled busses?

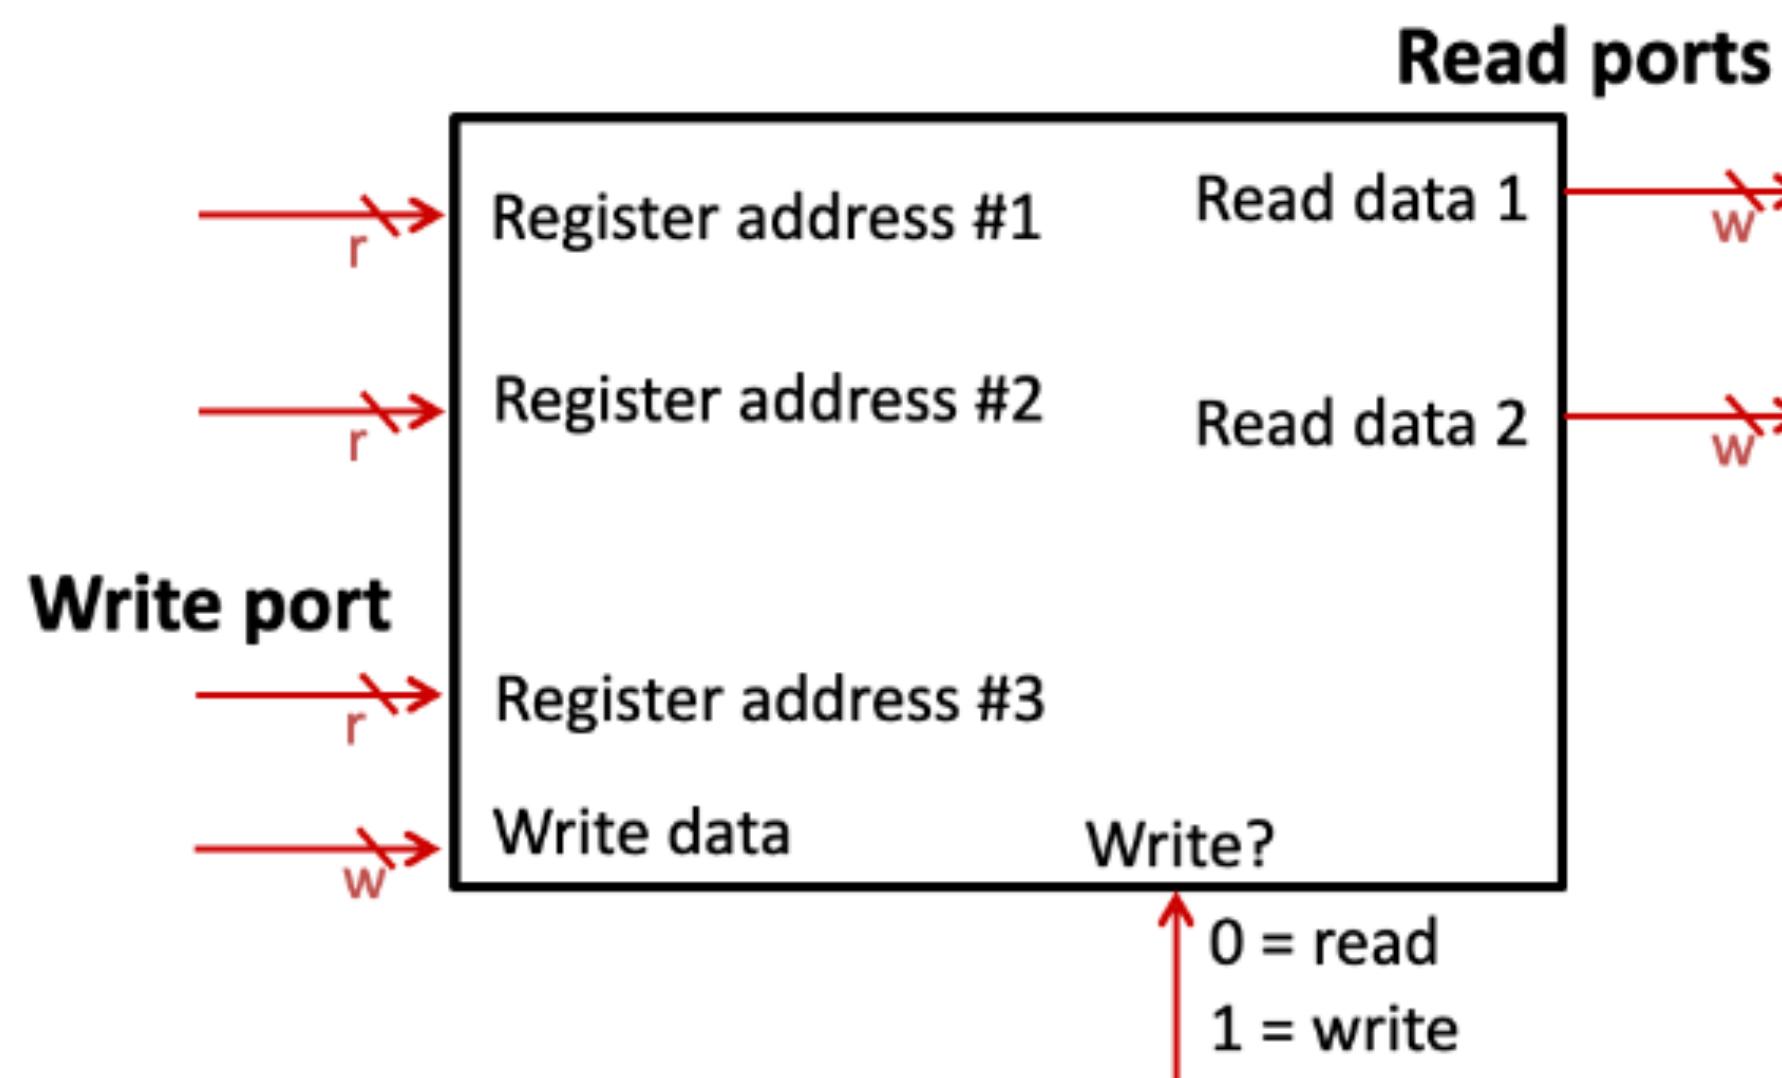

Word size = 16 bits, # registers = 16

ex

r = ?
w = ?


r = 8, w = 8

r = 16, w = 16

r = 4, w = 16

r = 16, w = 4

None of the above

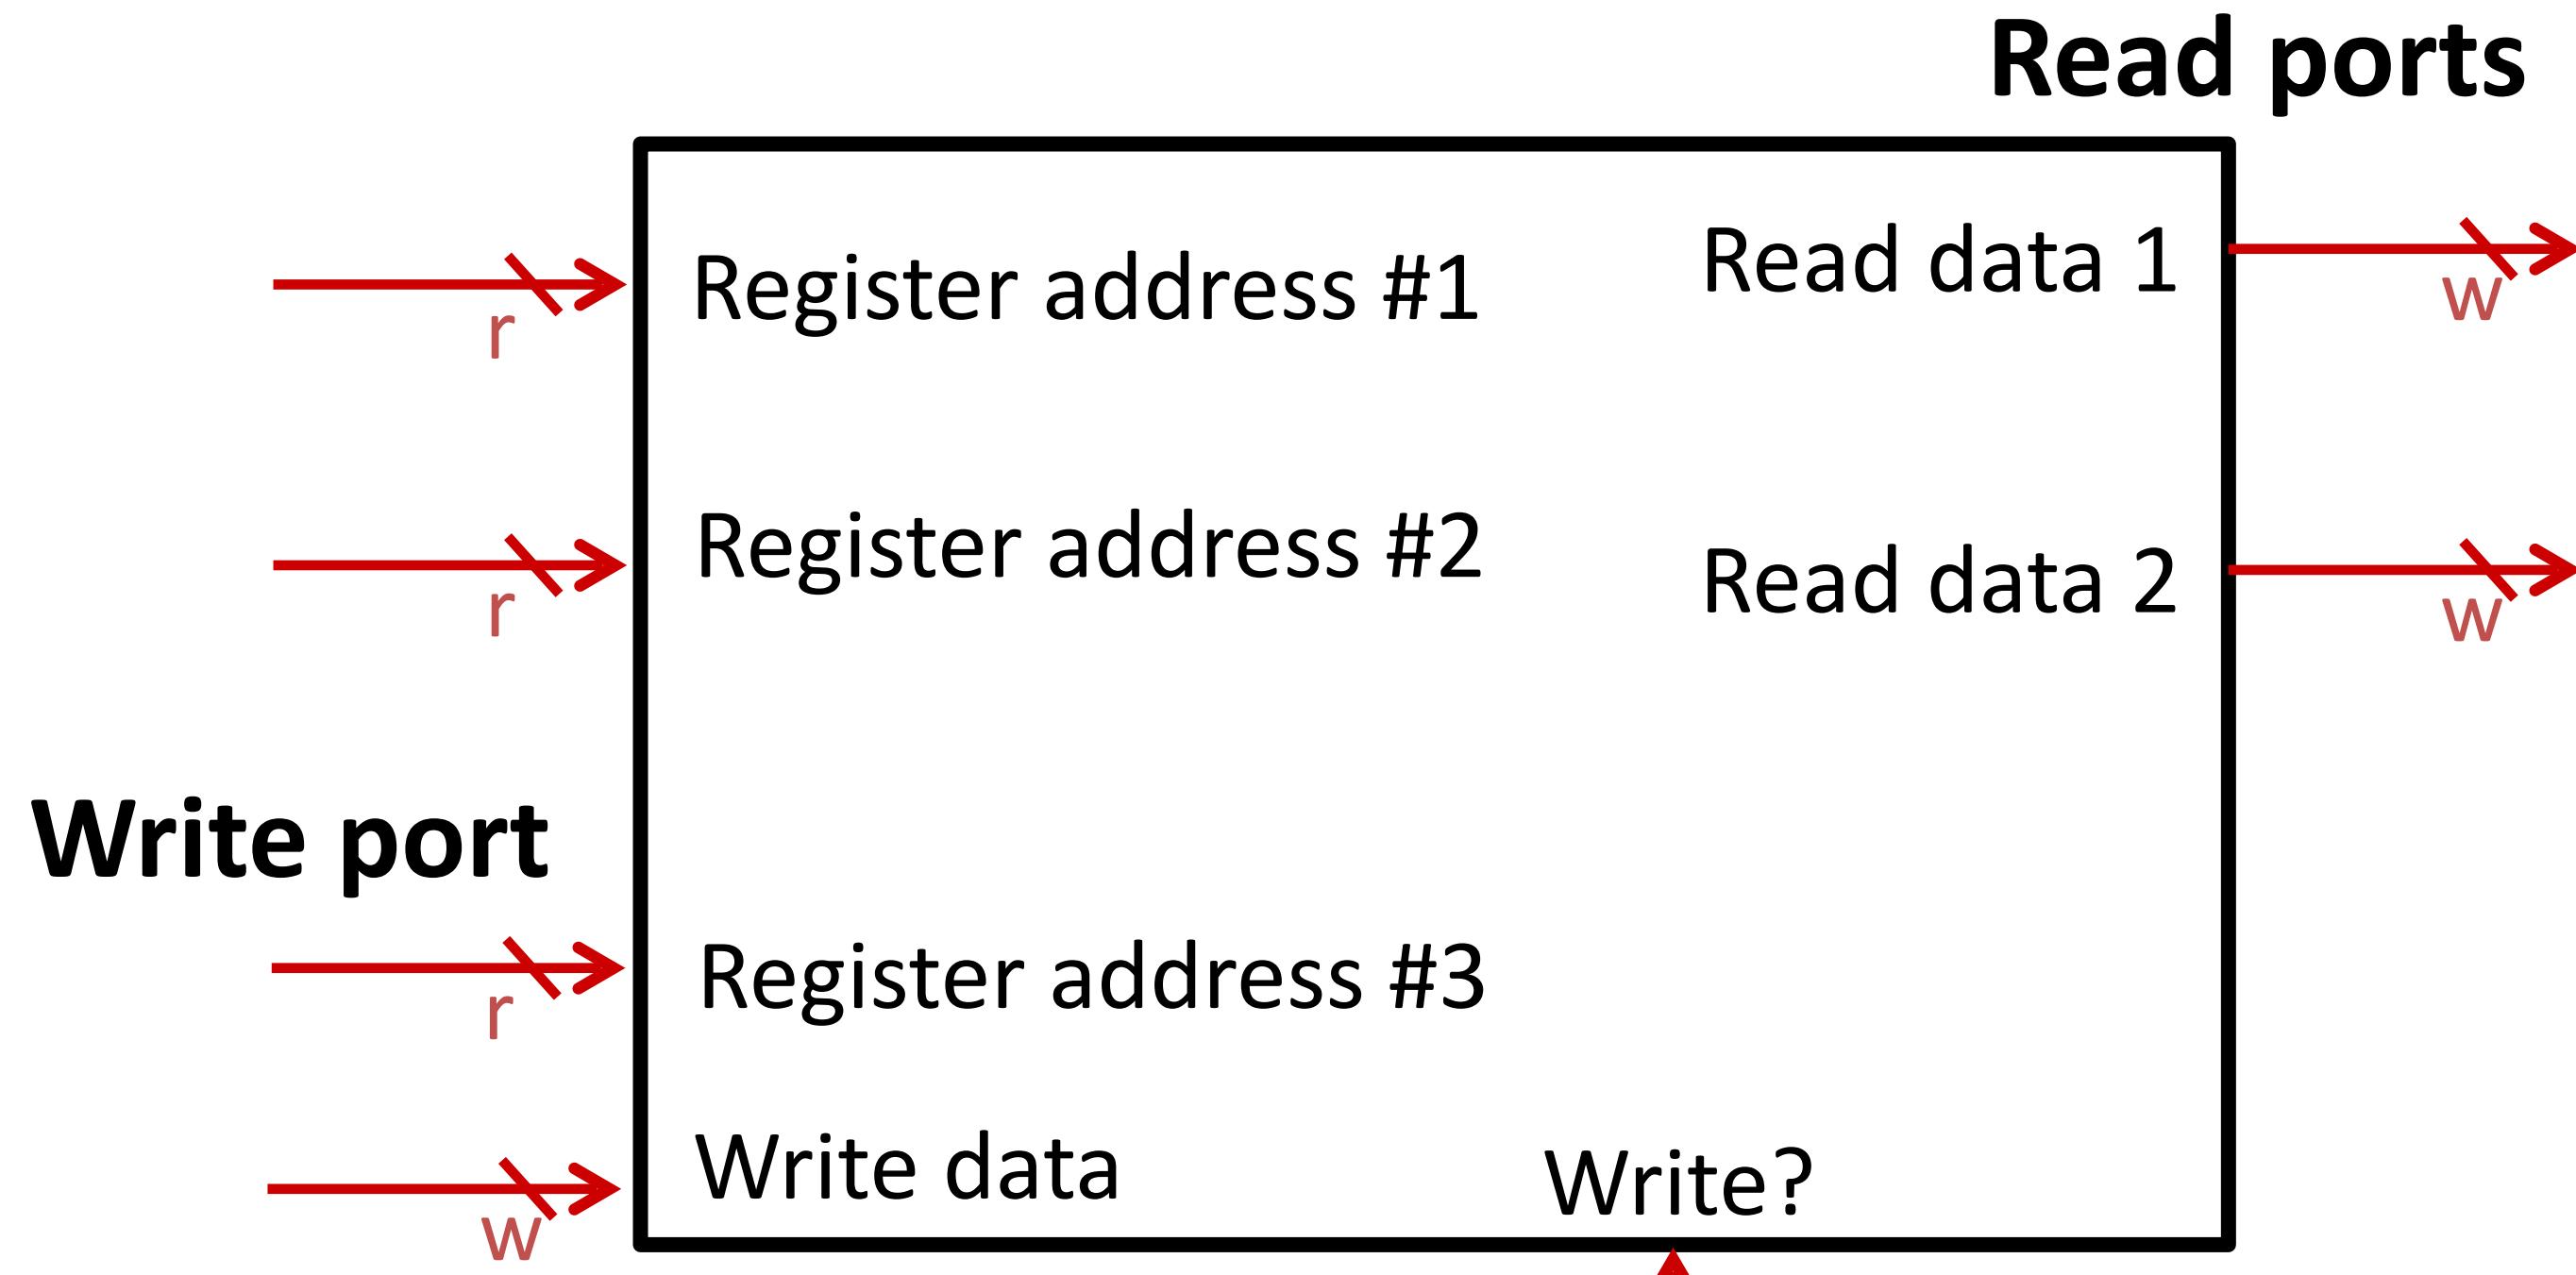

Word size = 16 bits, # registers = 16

ex

$r = ?$

$w = ?$

Abstraction!

We'll think of the register file like this:

R0 always holds hardcoded 0
R1 always holds hardcoded 1

R2 – R15: general purpose
(instructions can use them to hold anything)

Reg	Contents
R0	0x0000
R1	0x0001
R2	
R3	
R4	
R5	
R6	
R7	
R8	
R9	
R10	
R11	
R12	
R13	
R14	
R15	

HW ISA M: Data Memory




We'll think of the data memory like this:

Memory is byte-addressable, accesses full words (16 bits)

Memory is “Little Endian”: the “little” (low) byte is stored at the lower address.

Example: storing 1 at address 0x0 yields

Address	Contents
0x0 – 0x1	0x01 0x00
0x2 – 0x3	
0x4 – 0x5	
0x6 – 0x7	
0x8 – 0x9	
0xA – 0xB	
0xC – 0xD	
...	

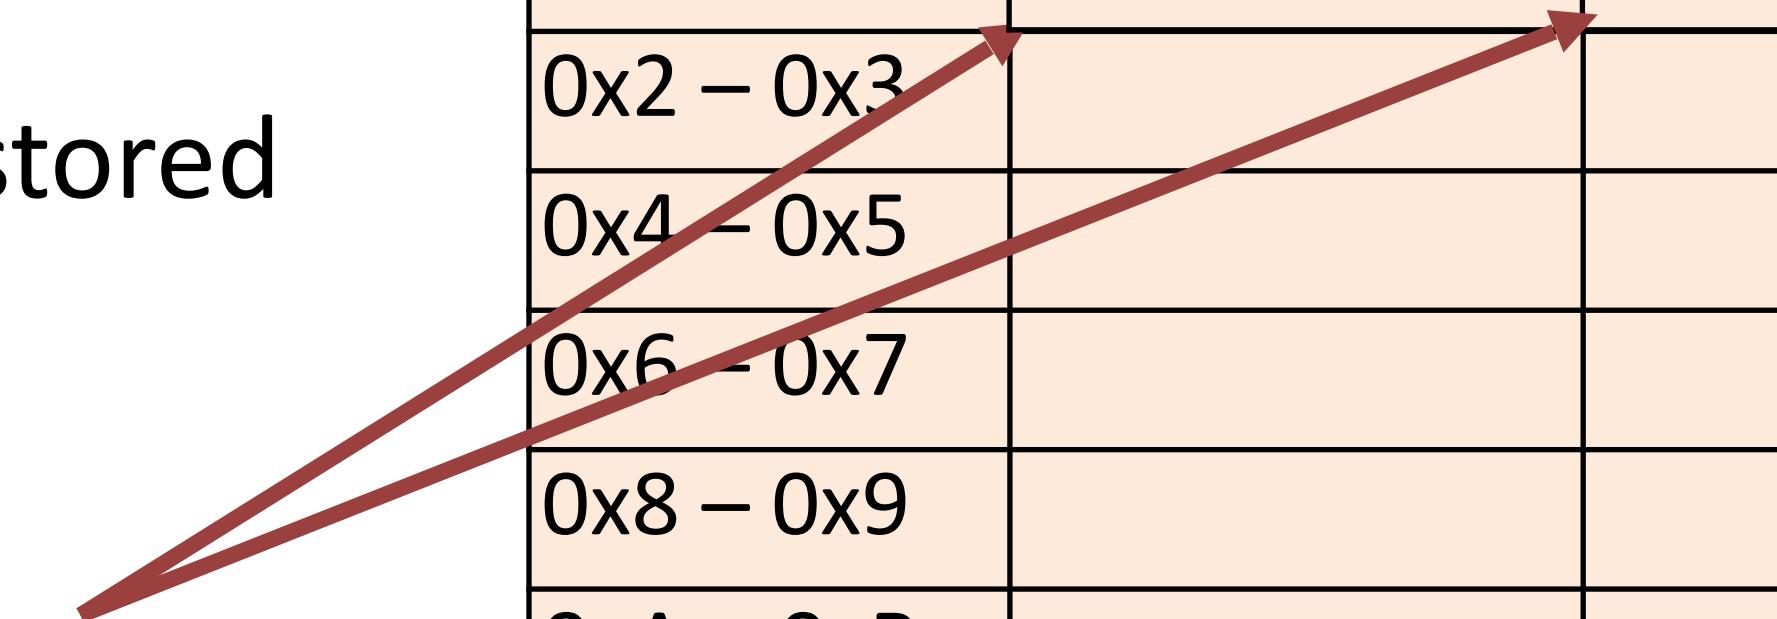

What is the full word stored at address 0x2?

0

Address	Contents	
0x0 – 0x1	0x01	0x00
0x2 – 0x3	0x23	0x45
0x4 – 0x5	0x67	0xab
0x6 – 0x7		
0x8 – 0x9		
0xA – 0xB		
0xC – 0xD		
...		

0x2345

0x4523

0x2300

0x0023

0x2367

HW ISA IM: Instruction Memory

Instructions are 1 word in size.


Separate *instruction memory*.



Program Counter (PC) register

- holds address of next instruction to execute.

We'll think of the instruction memory like this:

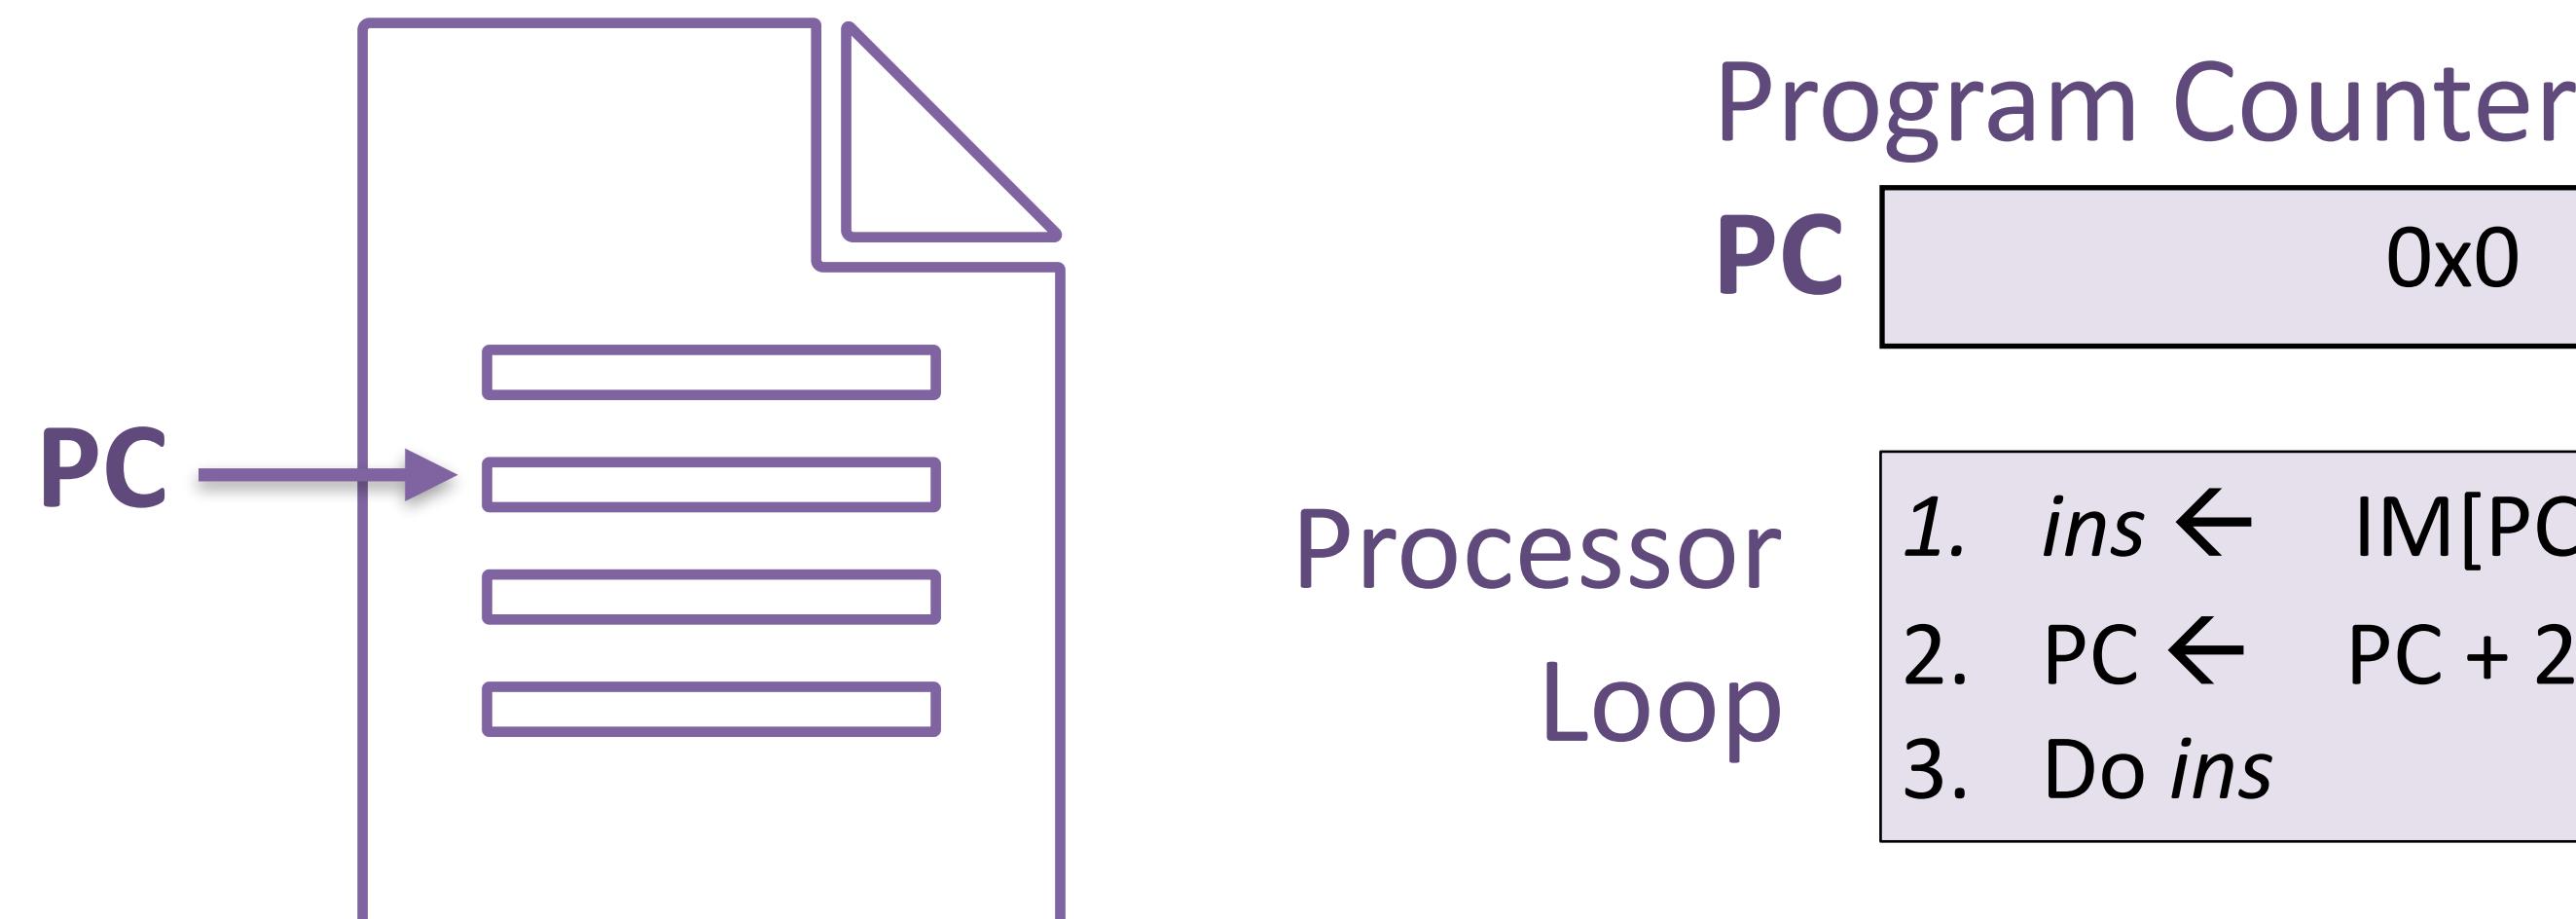

Address	Contents
0x0 – 0x1	
0x2 – 0x3	
0x4 – 0x5	
0x6 – 0x7	
0x8 – 0x9	
...	

HW ISA



Abstract Machine

PC: Program Counter

--

Processor Loop

1. $ins \leftarrow IM[PC]$
2. $PC \leftarrow PC + 2$
3. Do ins

M: Data Memory

Address	Contents
0x0 – 0x1	
0x2 – 0x3	
0x4 – 0x5	
0x6 – 0x7	
0x8 – 0x9	
0xA – 0xB	
0xC – 0xD	
...	

IM: Instruction Memory

Address	Contents
0x0 – 0x1	
0x2 – 0x3	
0x4 – 0x5	
0x6 – 0x7	
0x8 – 0x9	
...	

R: Register File

Reg	Contents
R0	0x0000
R1	0x0001
R2	
R3	
R4	
R5	
R6	
R7	
R8	
R9	
R10	
R11	
R12	
R13	
R14	
R15	

HW ISA Instructions

		16-bit Encoding			
Assembly Syntax	Meaning (R = register file, M = data memory)	Opcode	Rs	Rt	Rd
ADD Rs, Rt, Rd	$R[d] \leftarrow R[s] + R[t]$	0010	<i>s</i>	<i>t</i>	<i>d</i>
SUB Rs, Rt, Rd	$R[d] \leftarrow R[s] - R[t]$	0011	<i>s</i>	<i>t</i>	<i>d</i>
AND Rs, Rt, Rd	$R[d] \leftarrow R[s] \& R[t]$	0100	<i>s</i>	<i>t</i>	<i>d</i>
OR Rs, Rt, Rd	$R[d] \leftarrow R[s] R[t]$	0101	<i>s</i>	<i>t</i>	<i>d</i>
LW Rt, offset(Rs)	$R[t] \leftarrow M[R[s] + offset]$	0000	<i>s</i>	<i>t</i>	<i>offset</i>
SW Rt, offset(Rs)	$M[R[s] + offset] \leftarrow R[t]$	0001	<i>s</i>	<i>t</i>	<i>offset</i>
BEQ Rs, Rt, offset	If $R[s] == R[t]$ then $PC \leftarrow PC + 2 + offset * 2$	0111	<i>s</i>	<i>t</i>	<i>offset</i>
JMP offset	$PC \leftarrow offset * 2$	1000	<i>offset</i>		
HALT	Stops program execution	1111			

JMP offset is *unsigned*
All other offsets are *signed*

Arithmetic

Memory

Control flow

HW ISA IM: Instruction Memory

Instructions are 1 word in size.


Separate *instruction memory*.



Program Counter (PC) register

- holds address of next instruction to execute.

We'll think of the instruction memory like this:

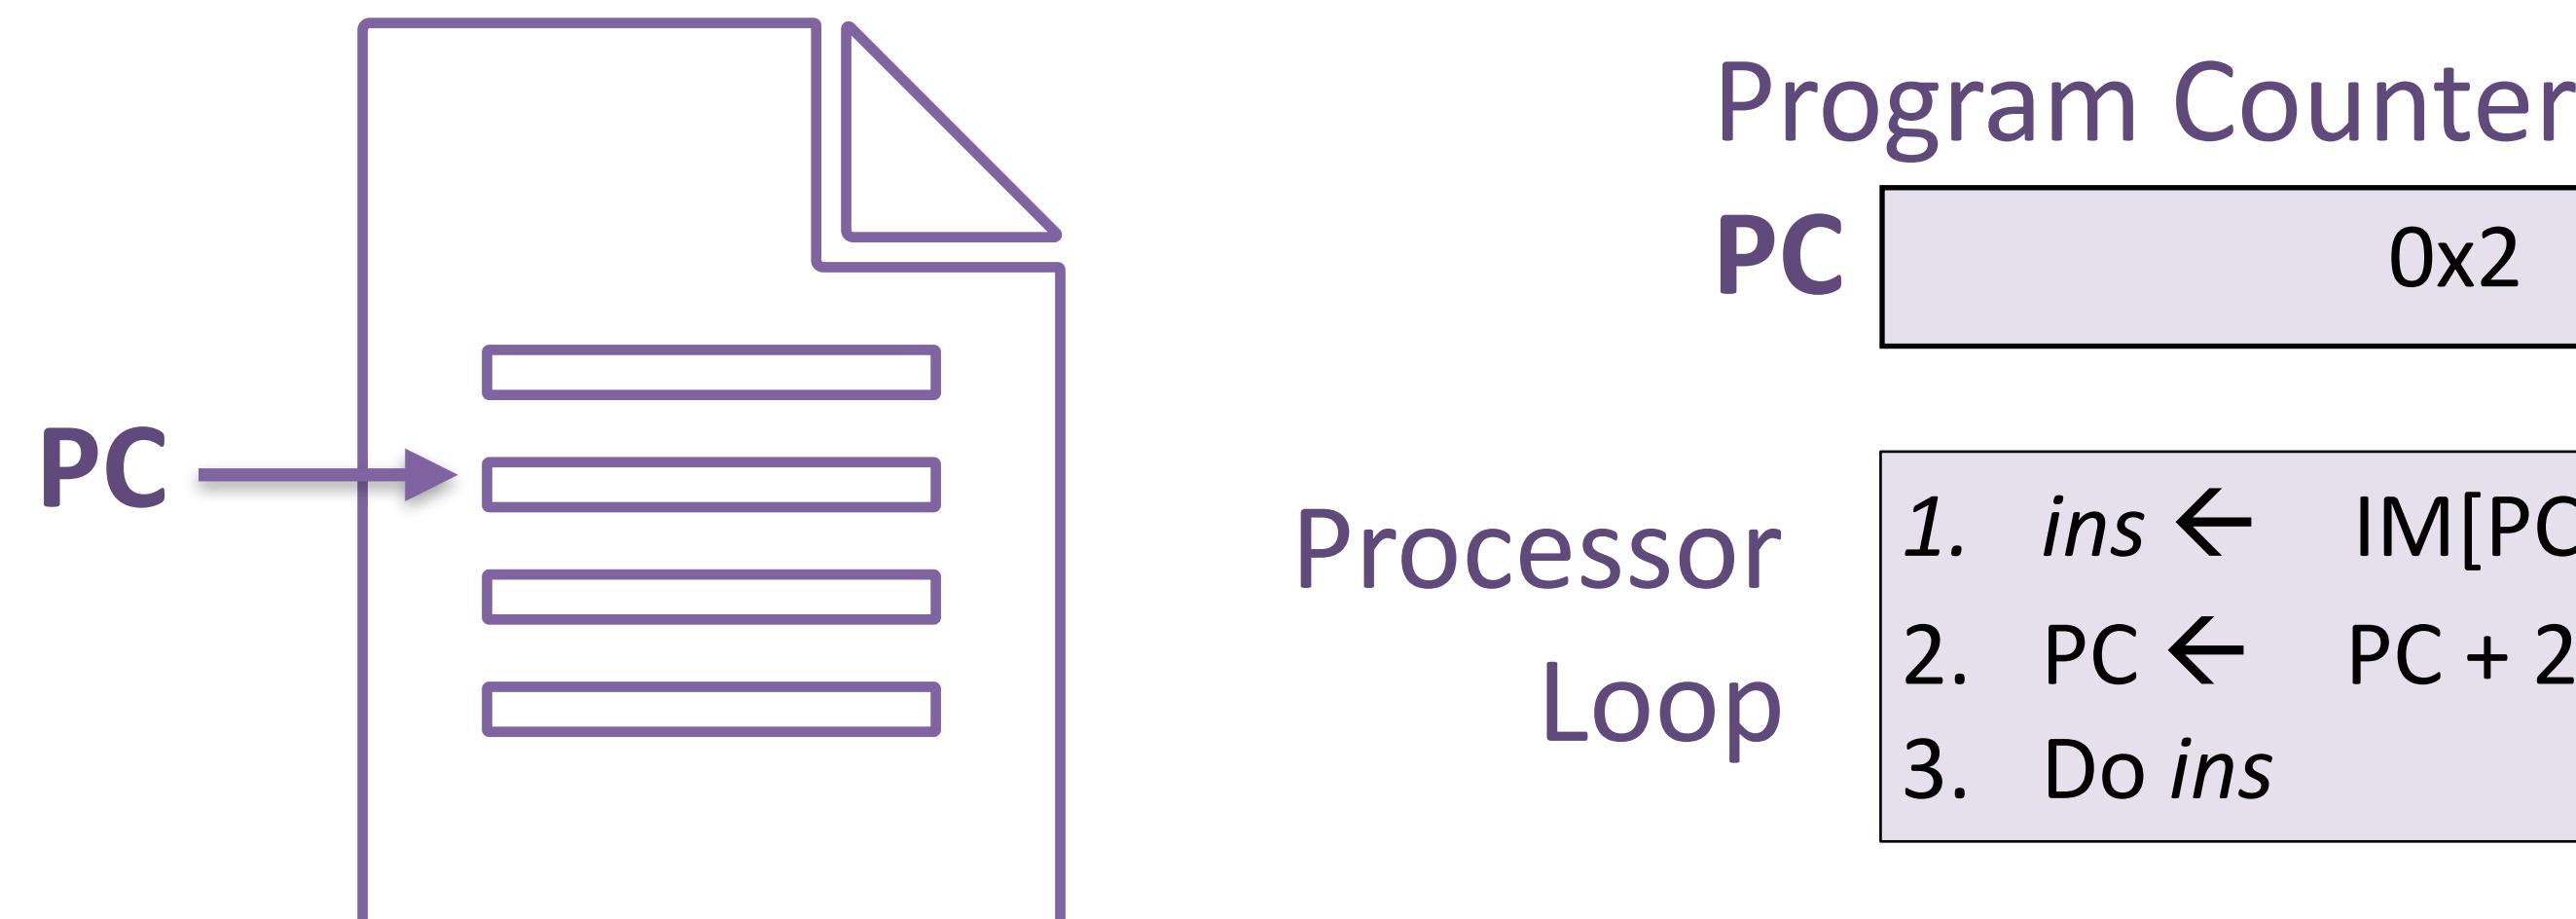

Address	Contents
0x0 – 0x1	ADD R0, R1, R2
0x2 – 0x3	SUB R2, R1, R3
0x4 – 0x5	OR R3, R3, R4
0x6 – 0x7	
0x8 – 0x9	
...	

What is the next operation this processor will do?

0

Program Counter
PC 0x2

Processor Loop
1. $ins \leftarrow IM[PC]$
2. $PC \leftarrow PC + 2$
3. Do ins

Address	Contents
0x0 – 0x1	ADD R0, R1, R2
0x2 – 0x3	SUB R2, R1, R3
0x4 – 0x5	OR R3, R3, R4
0x6 – 0x7	
0x8 – 0x9	
...	

ADD

SUB

OR

None of the above

ex

Exercise 0

HW ISA

Fill in the rest of the machine state based on this initial state

PC: Program Counter

Processor Loop

1. $ins \leftarrow IM[PC]$
2. $PC \leftarrow PC + 2$
3. Do ins

M: Data Memory

Address	Contents	
0x0 – 0x1	0x0F	0x00
0x2 – 0x3	0x04	0x01
0x4 – 0x5		
0x6 – 0x7		
0x8 – 0x9		
0xA – 0xB		
0xC – 0xD		
...		

R: Register File

Reg	Contents
R0	0x0000
R1	0x0001
R2	
R3	
R4	
R5	
R6	
R7	
R8	
R9	
R10	
R11	
R12	
R13	
R14	
R15	

IM: Instruction Memory

Address	Contents
0x0 – 0x1	ADD R1, R1, R2
0x2 – 0x3	SW R2, 4(R0)
0x4 – 0x5	HALT
0x6 – 0x7	
0x8 – 0x9	
...	

Execution Table for *Exercise #0* (shows step-by-step execution) Solutions

ex

PC	Instr	State Changes	
0x0	ADD R1, R1, R2	$R[2] \leftarrow R[1] \& R[1] = 1 + 1 = 0x0002 ;$	$PC \leftarrow PC + 2 = 0 + 2 = 2$
0x2	SW R2, 4(R0)	$M[R[0] + 4] = M[4] \leftarrow R[2] = 0x0002;$	$PC \leftarrow PC + 2 = 6 + 2 = 8$
0x4	HALT	<i>Program execution stops</i>	

Reminder: the two bytes will be stored in **LittleEndian** order when we store them to memory **M**.

That is, the byte 0x02 will be stored in the “little” end of the word—the lower address of the pair of addresses that store the word. 0x00 will be stored at the higher address.

ex

Exercise 0

Solutions

HW ISA

PC: Program Counter

--

Processor Loop

1. $ins \leftarrow IM[PC]$
2. $PC \leftarrow PC + 2$
3. Do ins

M: Data Memory

Address	Contents	
0x0 – 0x1	0x0F	0x00
0x2 – 0x3	0x04	0x01
0x4 – 0x5	0x02	0x00
0x6 – 0x7		
0x8 – 0x9		
0xA – 0xB		
0xC – 0xD		
...		

R: Register File

Reg	Contents
R0	0x0000
R1	0x0001
R2	0x0002
R3	
R4	
R5	
R6	
R7	
R8	
R9	
R10	
R11	
R12	
R13	
R14	
R15	

IM: Instruction Memory

Address	Contents
0x0 – 0x1	ADD R1, R1, R2
0x2 – 0x3	SW R2, 4(R0)
0x4 – 0x5	HALT
0x6 – 0x7	
0x8 – 0x9	
...	

ex

Exercise 1

HW ISA

Fill in the rest of the machine state based on this initial state

PC: Program Counter

Processor Loop

1. $ins \leftarrow IM[PC]$
2. $PC \leftarrow PC + 2$
3. Do ins

M: Data Memory

Address	Contents	
0x0 – 0x1	0x0F	0x00
0x2 – 0x3	0x04	0x01
0x4 – 0x5		
0x6 – 0x7		
0x8 – 0x9		
0xA – 0xB		
0xC – 0xD		
...		

R: Register File

Reg	Contents
R0	0x0000
R1	0x0001
R2	
R3	
R4	
R5	
R6	
R7	
R8	
R9	
R10	
R11	
R12	
R13	
R14	
R15	

IM: Instruction Memory

Address	Contents
0x0 – 0x1	LW R3, 0(R0)
0x2 – 0x3	LW R4, 2(R0)
0x4 – 0x5	AND R3, R4, R5
0x6 – 0x7	SW R5, 4(R0)
0x8 – 0x9	HALT
...	

Execution Table for *Exercise #1* (shows step-by-step execution)

ex

PC	Instr	State Changes
0x0	LW R3 0(R0)	

ex

Exercise 2

HW ISA

Fill in the rest of the machine state based on this initial state

PC: Program Counter

--

Processor Loop

1. $ins \leftarrow IM[PC]$
2. $PC \leftarrow PC + 2$
3. Do ins

M: Data Memory

Address	Contents	
0x0 – 0x1	0x0F	0x00
0x2 – 0x3	0x04	0x01
0x4 – 0x5		
0x6 – 0x7		
0x8 – 0x9		
0xA – 0xB		
0xC – 0xD		
...		

R: Register File

Reg	Contents (time: \rightarrow)
R0	0x0000
R1	0x0001
R2	
R3	
R4	
R5	
R6	
R7	
R8	
R9	0x0002
R10	0x0003
R11	
R12	
R13	
R14	
R15	


IM: Instruction Memory

Address	Contents
0x0 – 0x1	SUB R8, R8, R8
0x2 – 0x3	BEQ R9, R0, 3
0x4 – 0x5	ADD R10, R8, R8
0x6 – 0x7	SUB R9, R1, R9
0x8 – 0x9	JMP 1
0xA – 0xB	HALT
...	

Execution Table for *Exercise #2* (shows step-by-step execution)

ex

HW ARCH microarchitecture

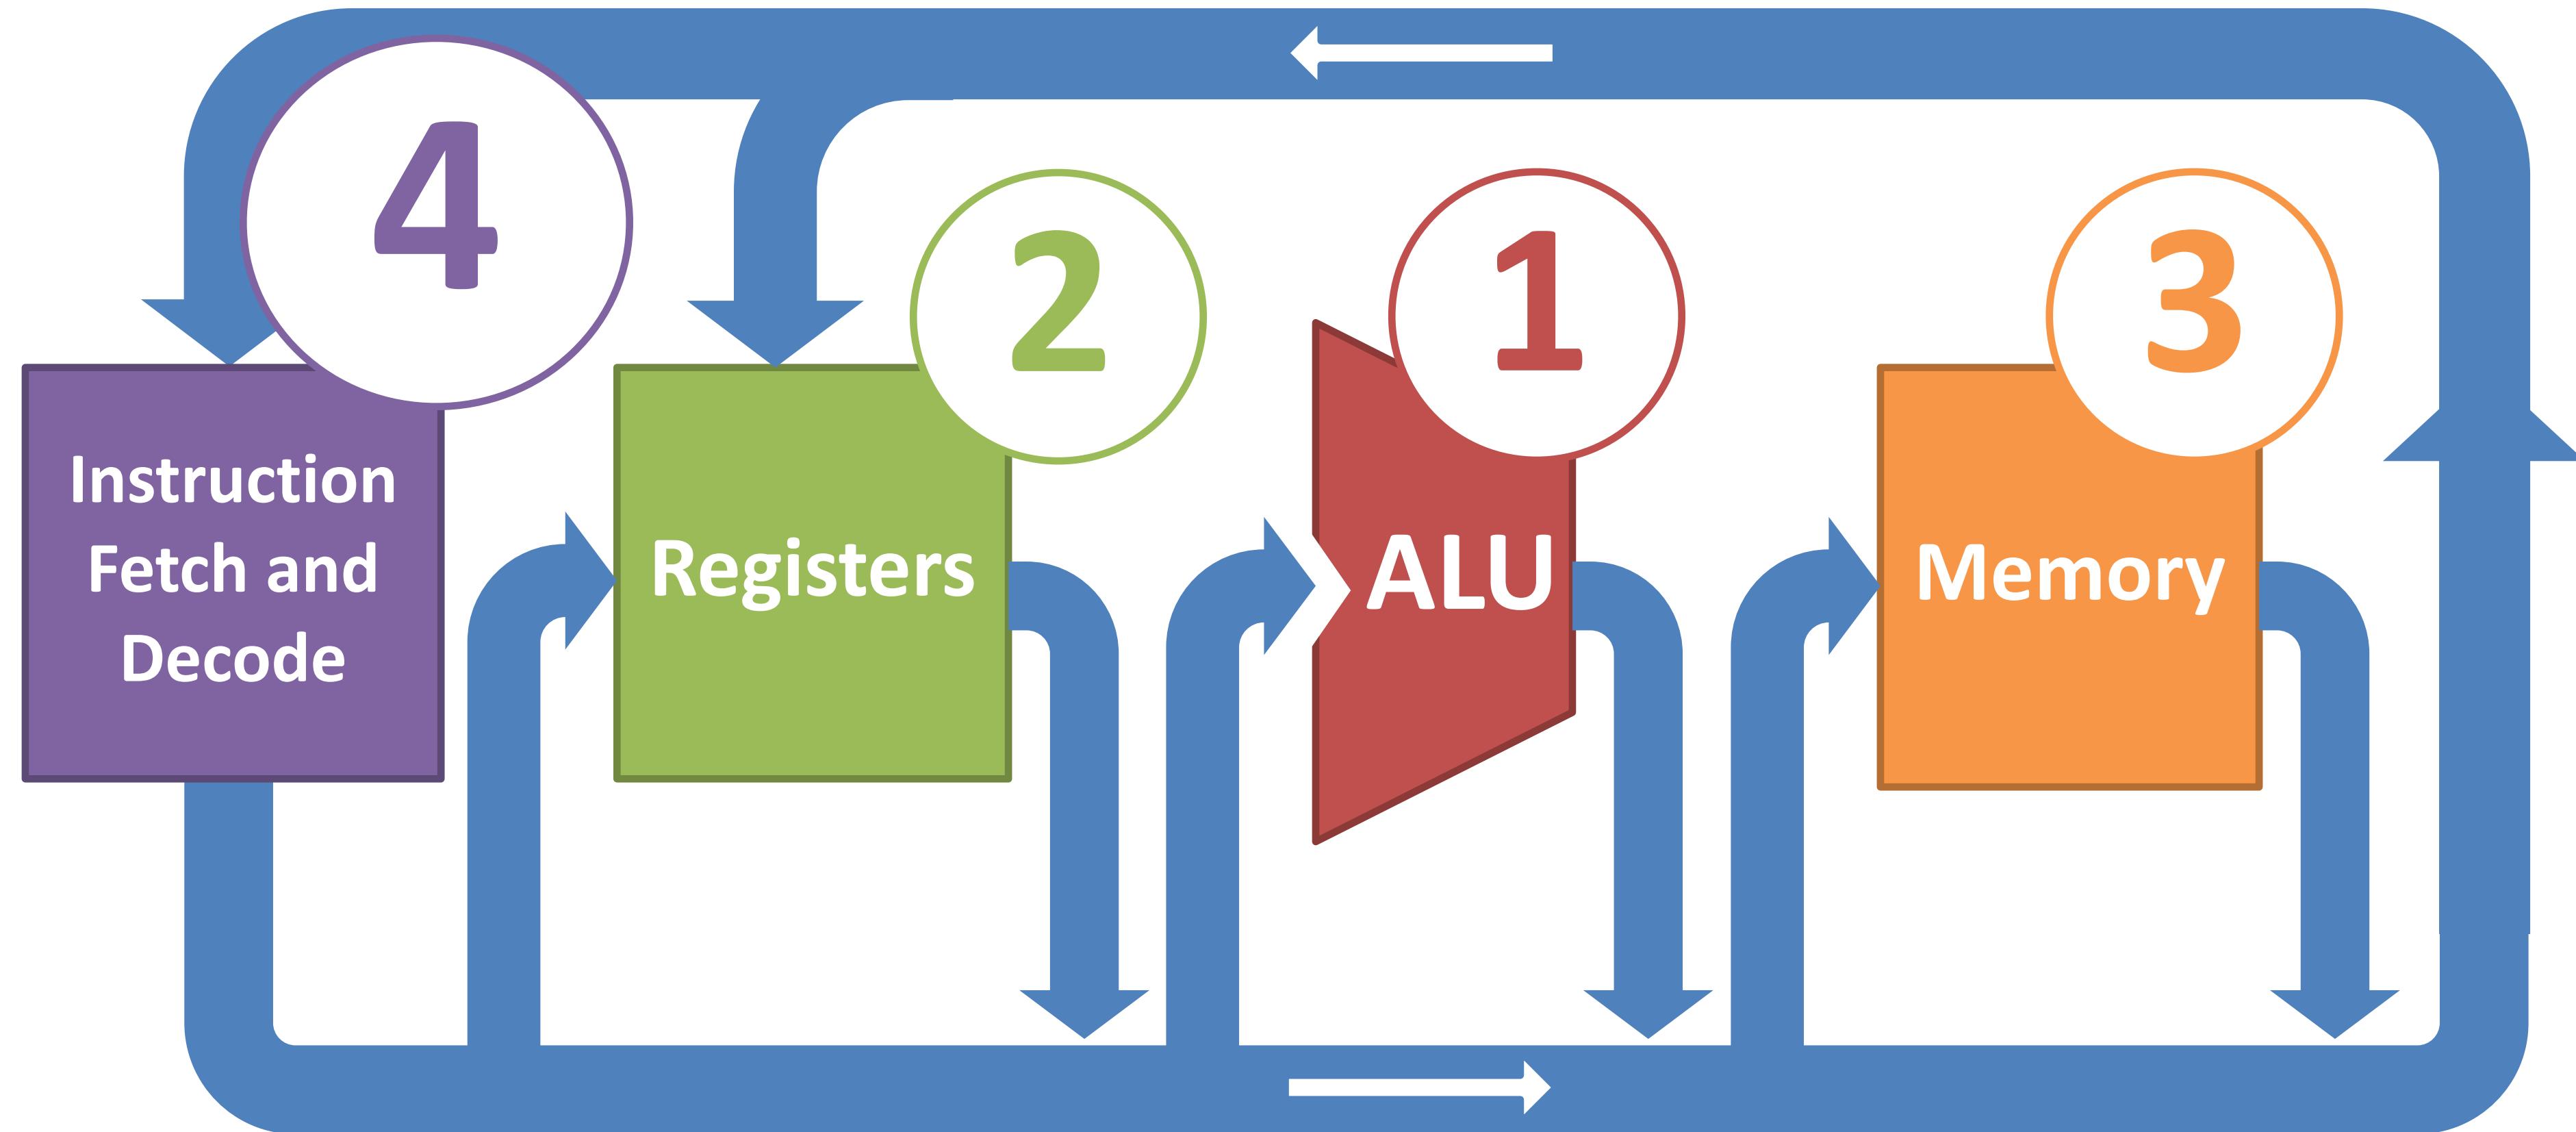

One possible hardware implementation of the HW ISA


Instruction Fetch (default, unless branch or jump)

Fetch instruction from memory.

Increment **program counter (PC)** to point to the next instruction.


Processor Loop

1. $ins \leftarrow IM[PC]$
2. $PC \leftarrow PC + 2$
3. Do ins

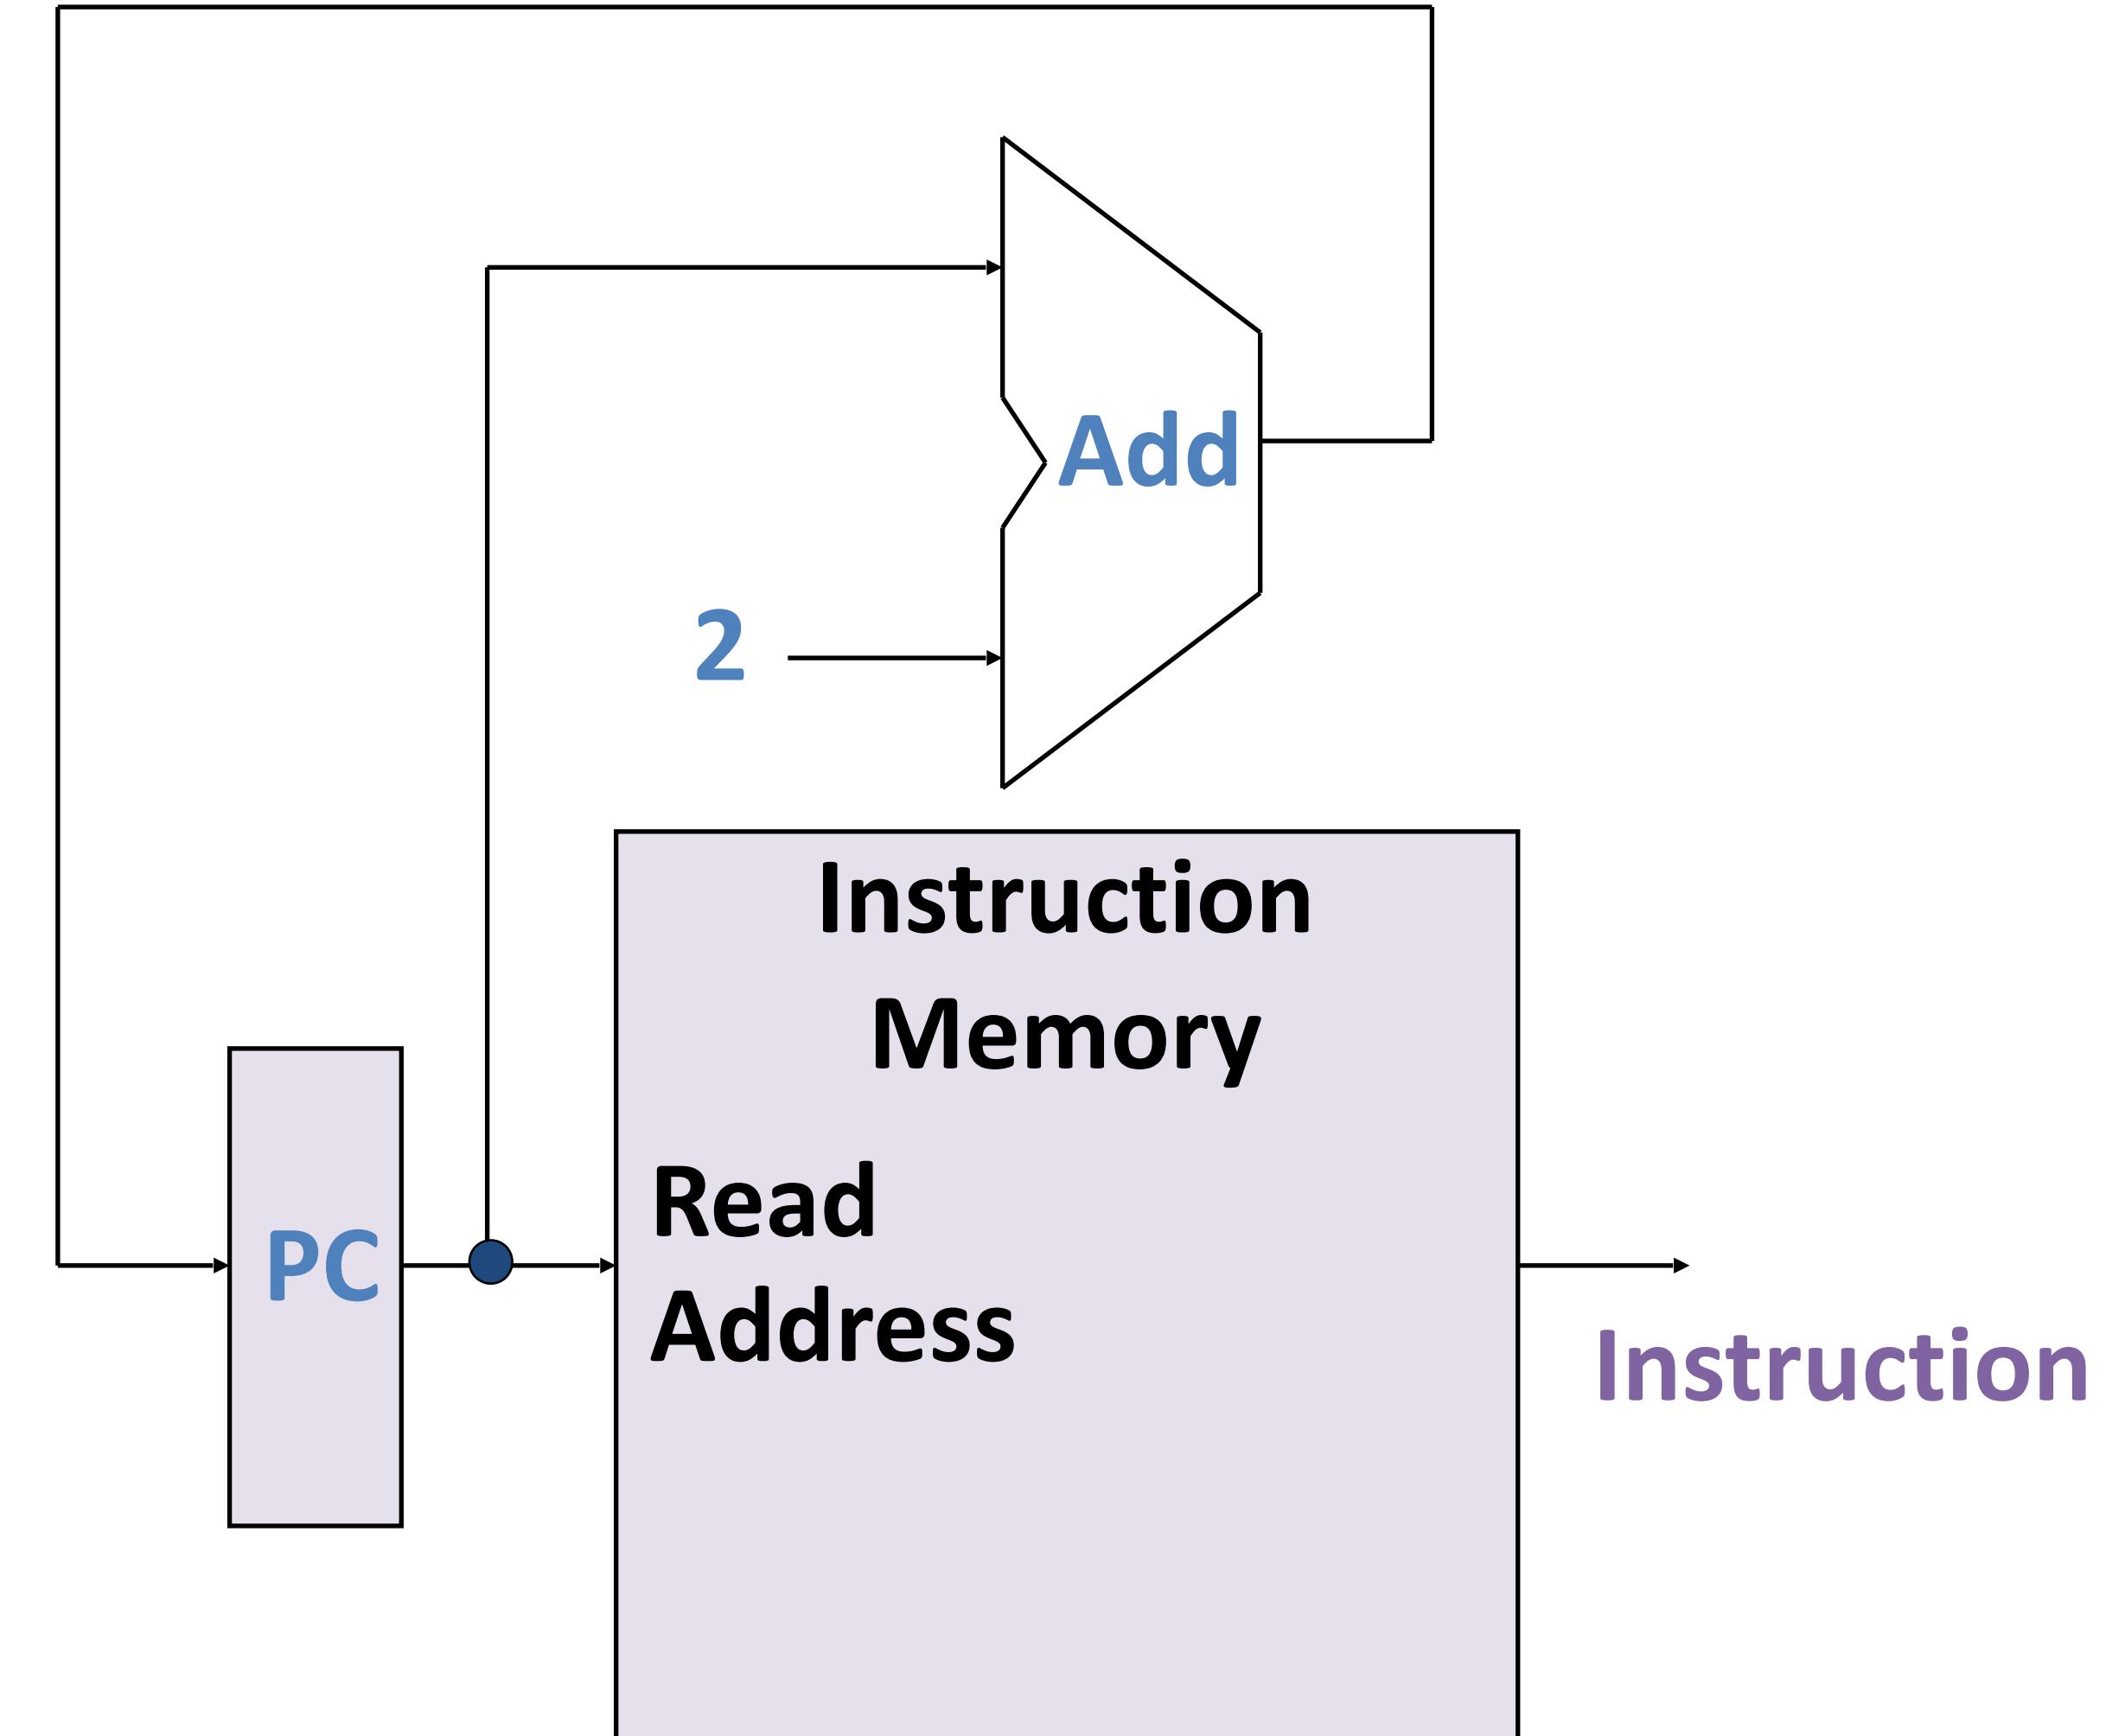

Which of the following is used inside this unit?

0

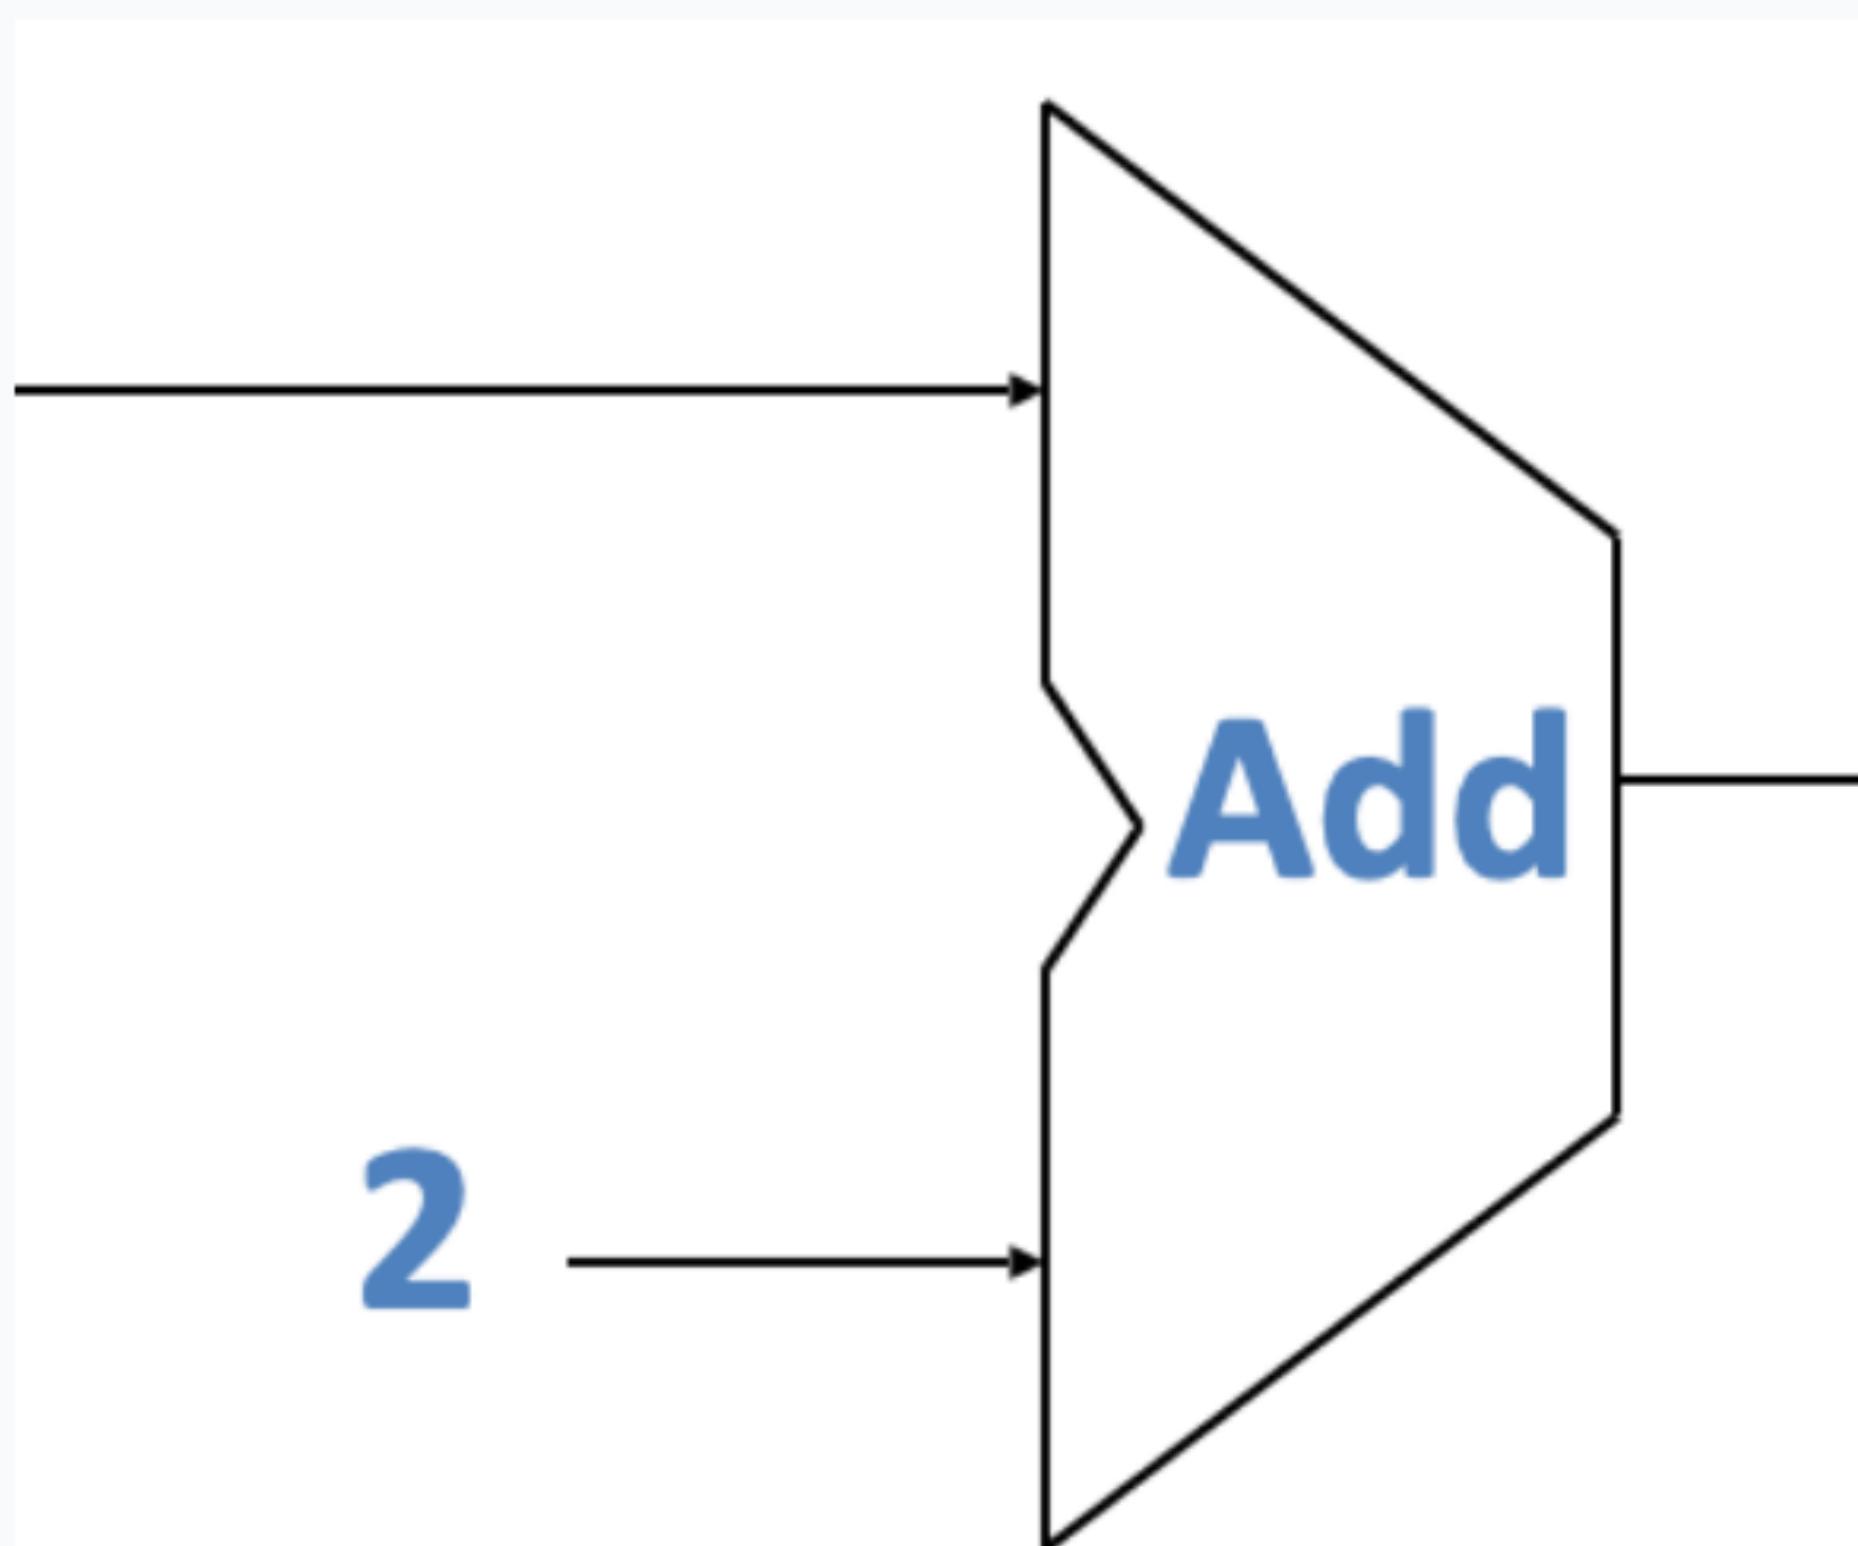

D-flip-flop

Ripple-carry adder

Encoder

A & B

B & C

C & D

Instruction Encoding: 3 formats

Arithmetic instructions:

- 2 source register IDs (Rs,Rt)
- 1 destination register ID (Rd)

All have 4-bit opcode in MSBs



15:12	11:8	7:4	3:0
opcode	Rs	Rt	Rd

Memory/branch instructions:

- address/source register ID (Rs)
- data/source register ID (Rt)
- 4-bit offset

15:12	11:8	7:4	3:0
opcode	Rs	Rt	offset

Jump instruction:

- 12-bit offset

15:12	11:0
opcode	offset

Arithmetic Instructions

16-bit Encoding


Instruction	Meaning	Opcode	Rs	Rt	Rd
ADD Rs, Rt, Rd	$R[d] \leftarrow R[s] + R[t]$	0010	0-15	0-15	0-15
SUB Rs, Rt, Rd	$R[d] \leftarrow R[s] - R[t]$	0011	0-15	0-15	0-15
AND Rs, Rt, Rd	$R[d] \leftarrow R[s] \& R[t]$	0100	0-15	0-15	0-15
OR Rs, Rt, Rd	$Rd \leftarrow R[s] R[t]$	0101	0-15	0-15	0-15
...					

Example encoding:

ADD R3, R6, R8


Opcode	Rs	Rt	Rd
0010	0011	0110	1000

Arithmetic Instructions: Instruction Decode, Register Access, ALU

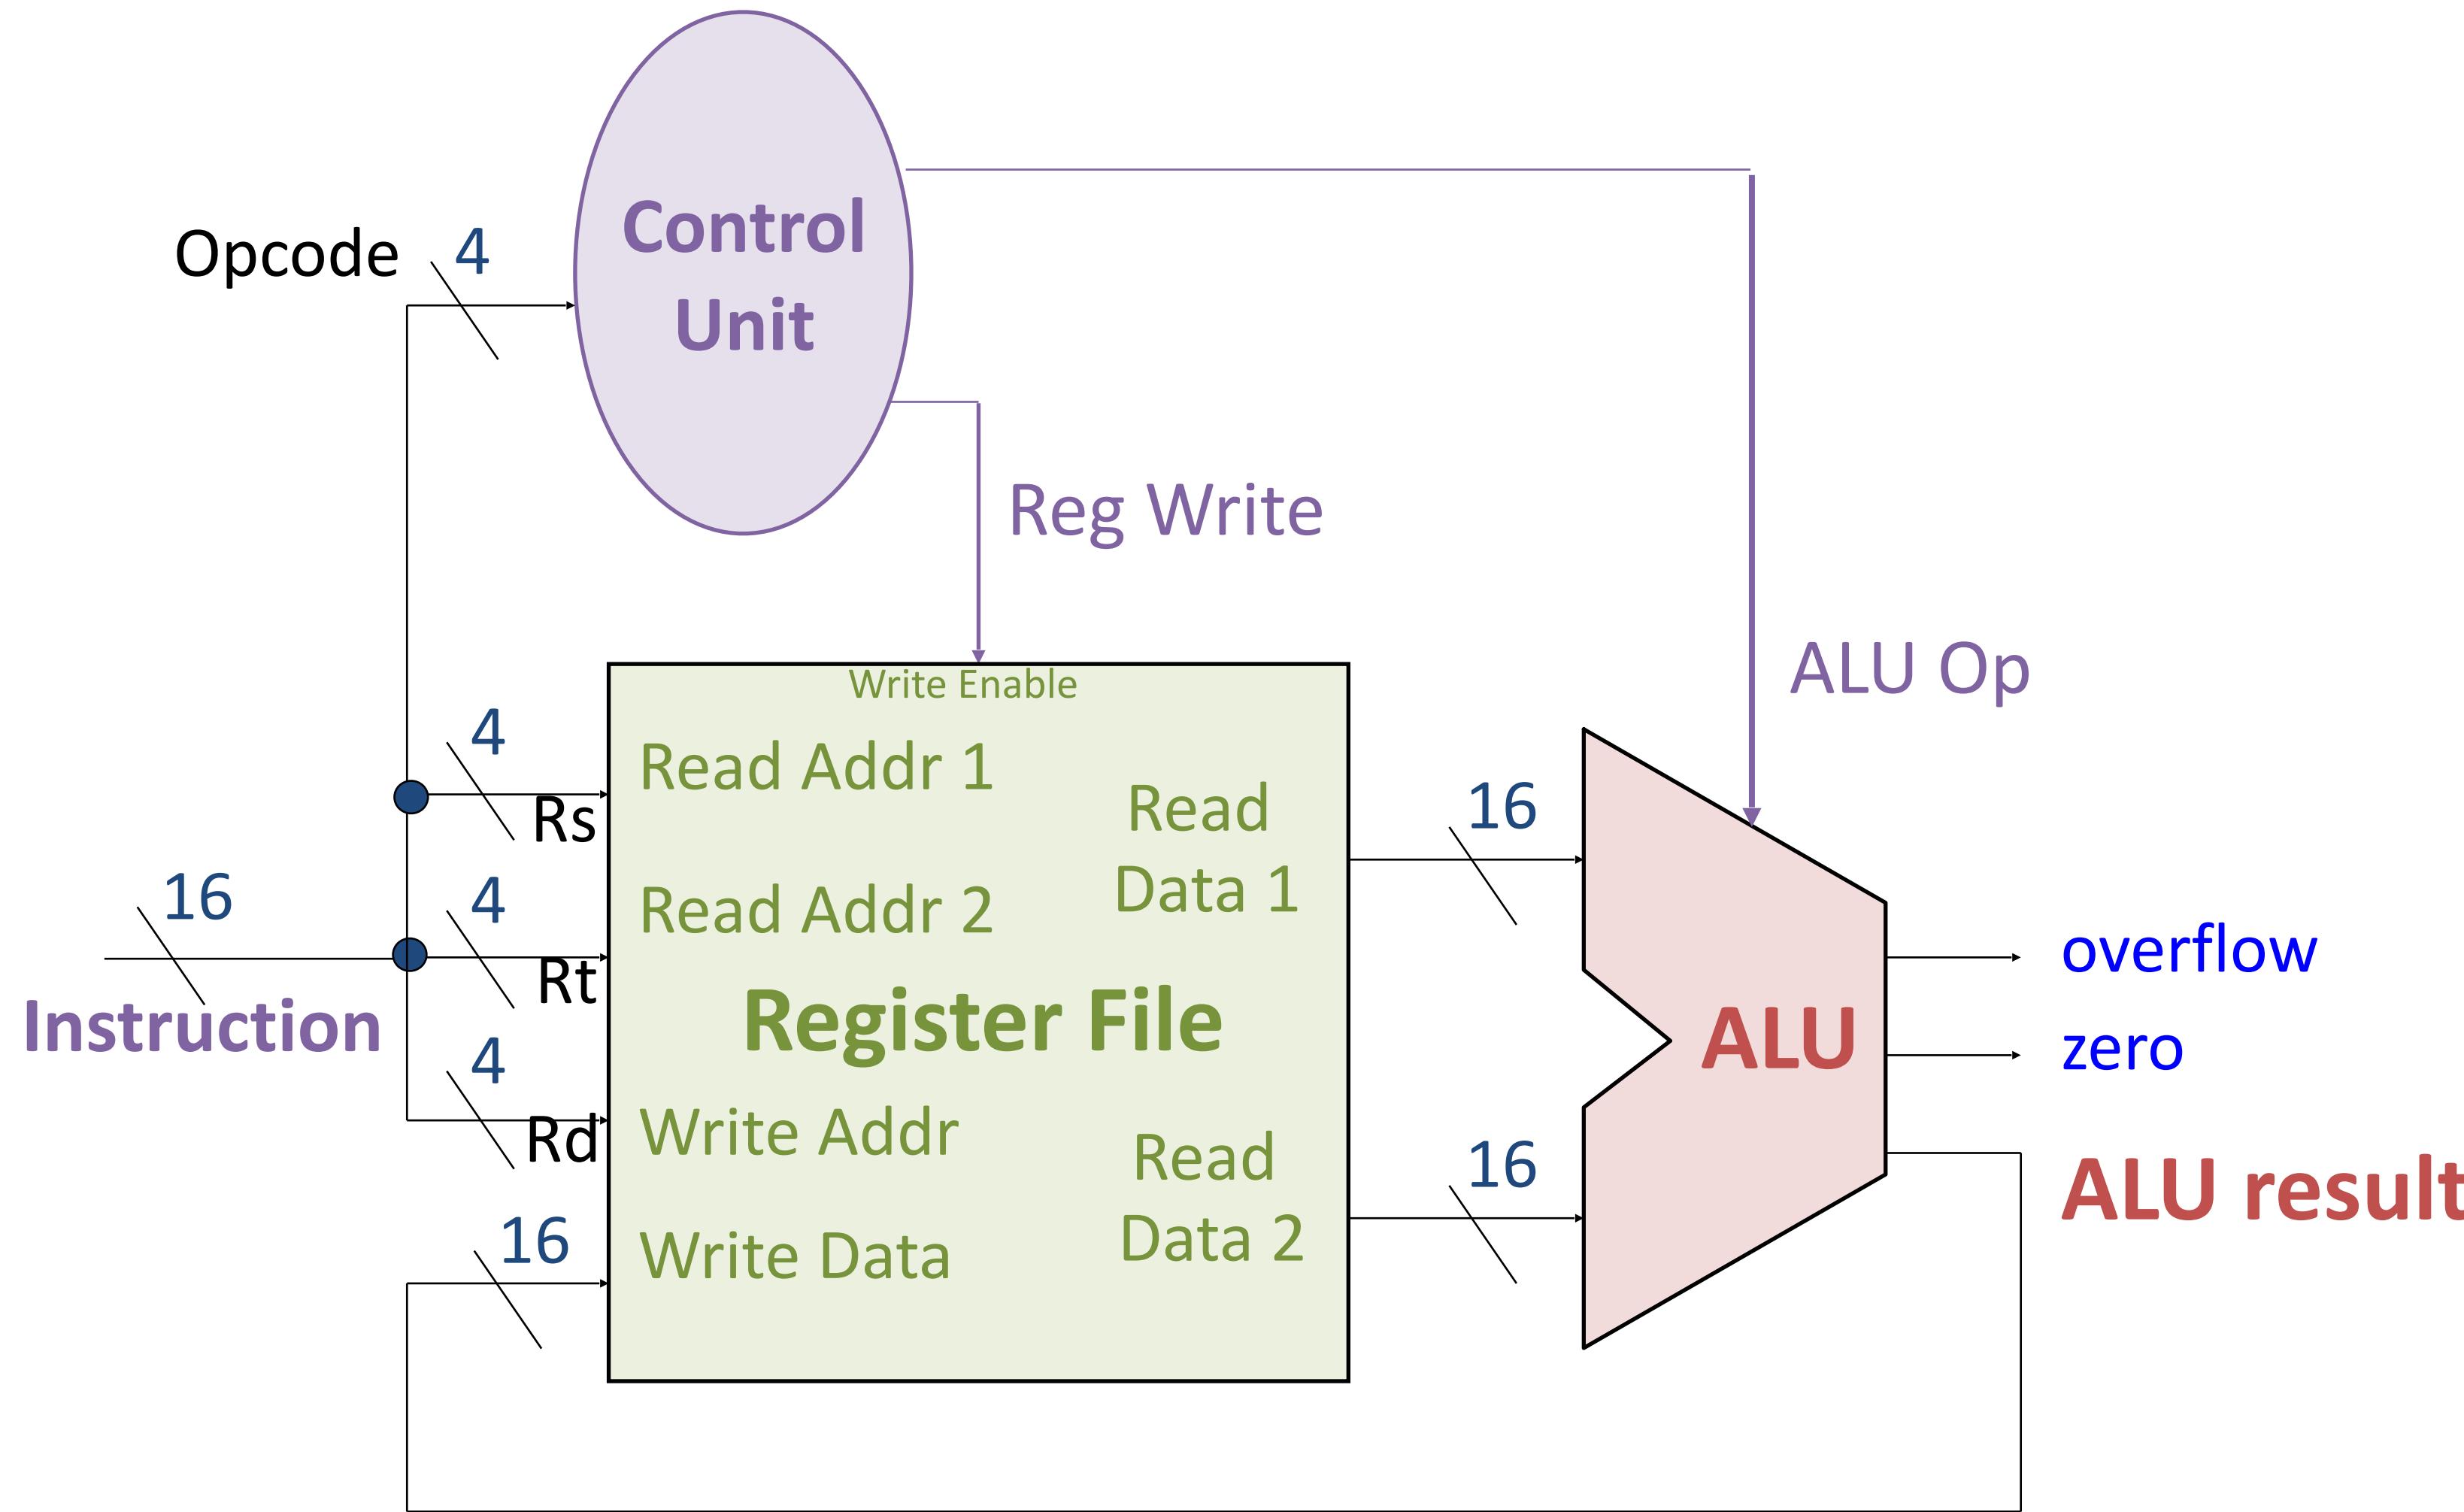

The control unit

A large instantiation of a truth table that controls parts of the microarchitecture

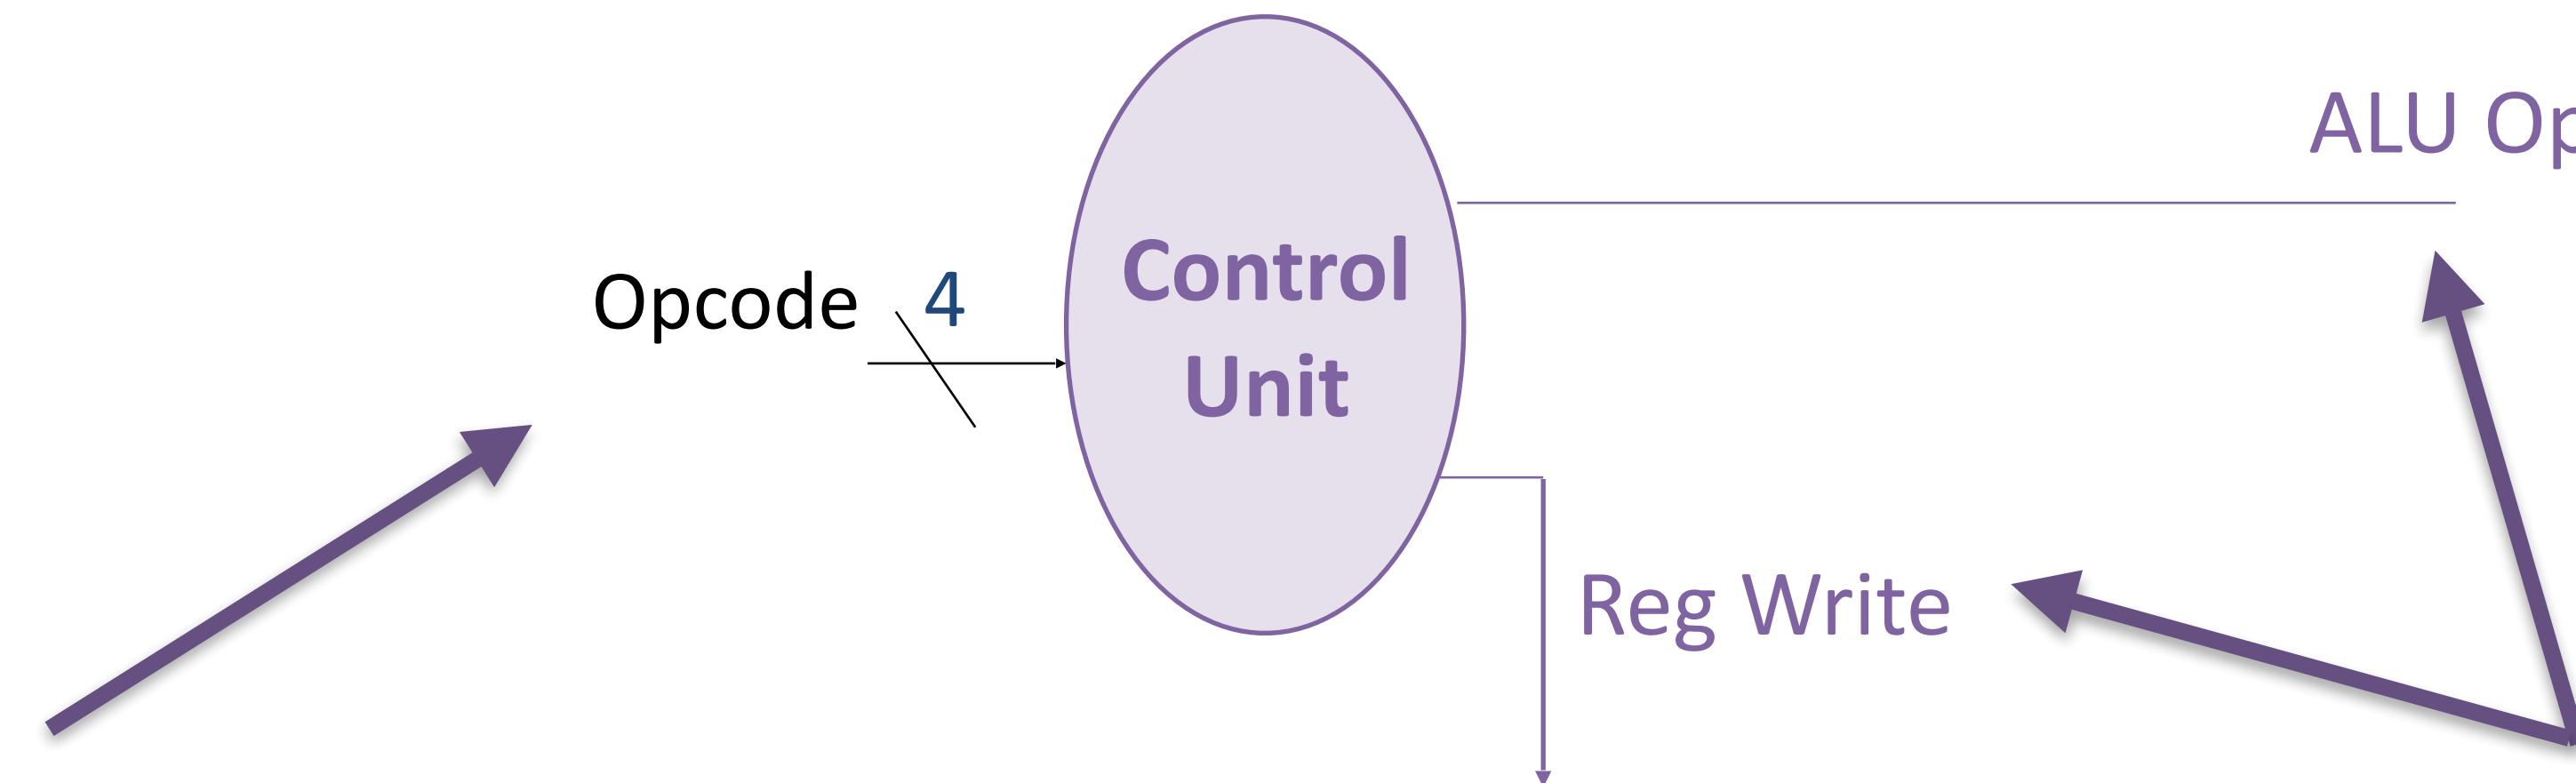

Input: the opcode
from the instructions

Output: many wires
controlling decisions

You will implement the control unit on the Arch Assignment!

Memory Instructions

Instruction	Meaning	Op	Rs	Rt	Rd
$LW\ Rt, offset(Rs)$	$R[t] \leftarrow Mem[R[s] + offset]$	0000	0-15	0-15	$offset$
$SW\ Rt, offset(Rs)$	$Mem[R[s] + offset] \leftarrow R[t]$	0001	0-15	0-15	$offset$
...					

Example encoding:


SW R6, -8(R3)

Opcode	Rs	Rt	Rd
0001	0011	0110	1000

Memory Instructions: Instruction Decode, Register/Memory Access, ALU

How can we support arithmetic
and memory instructions?


What's shared?

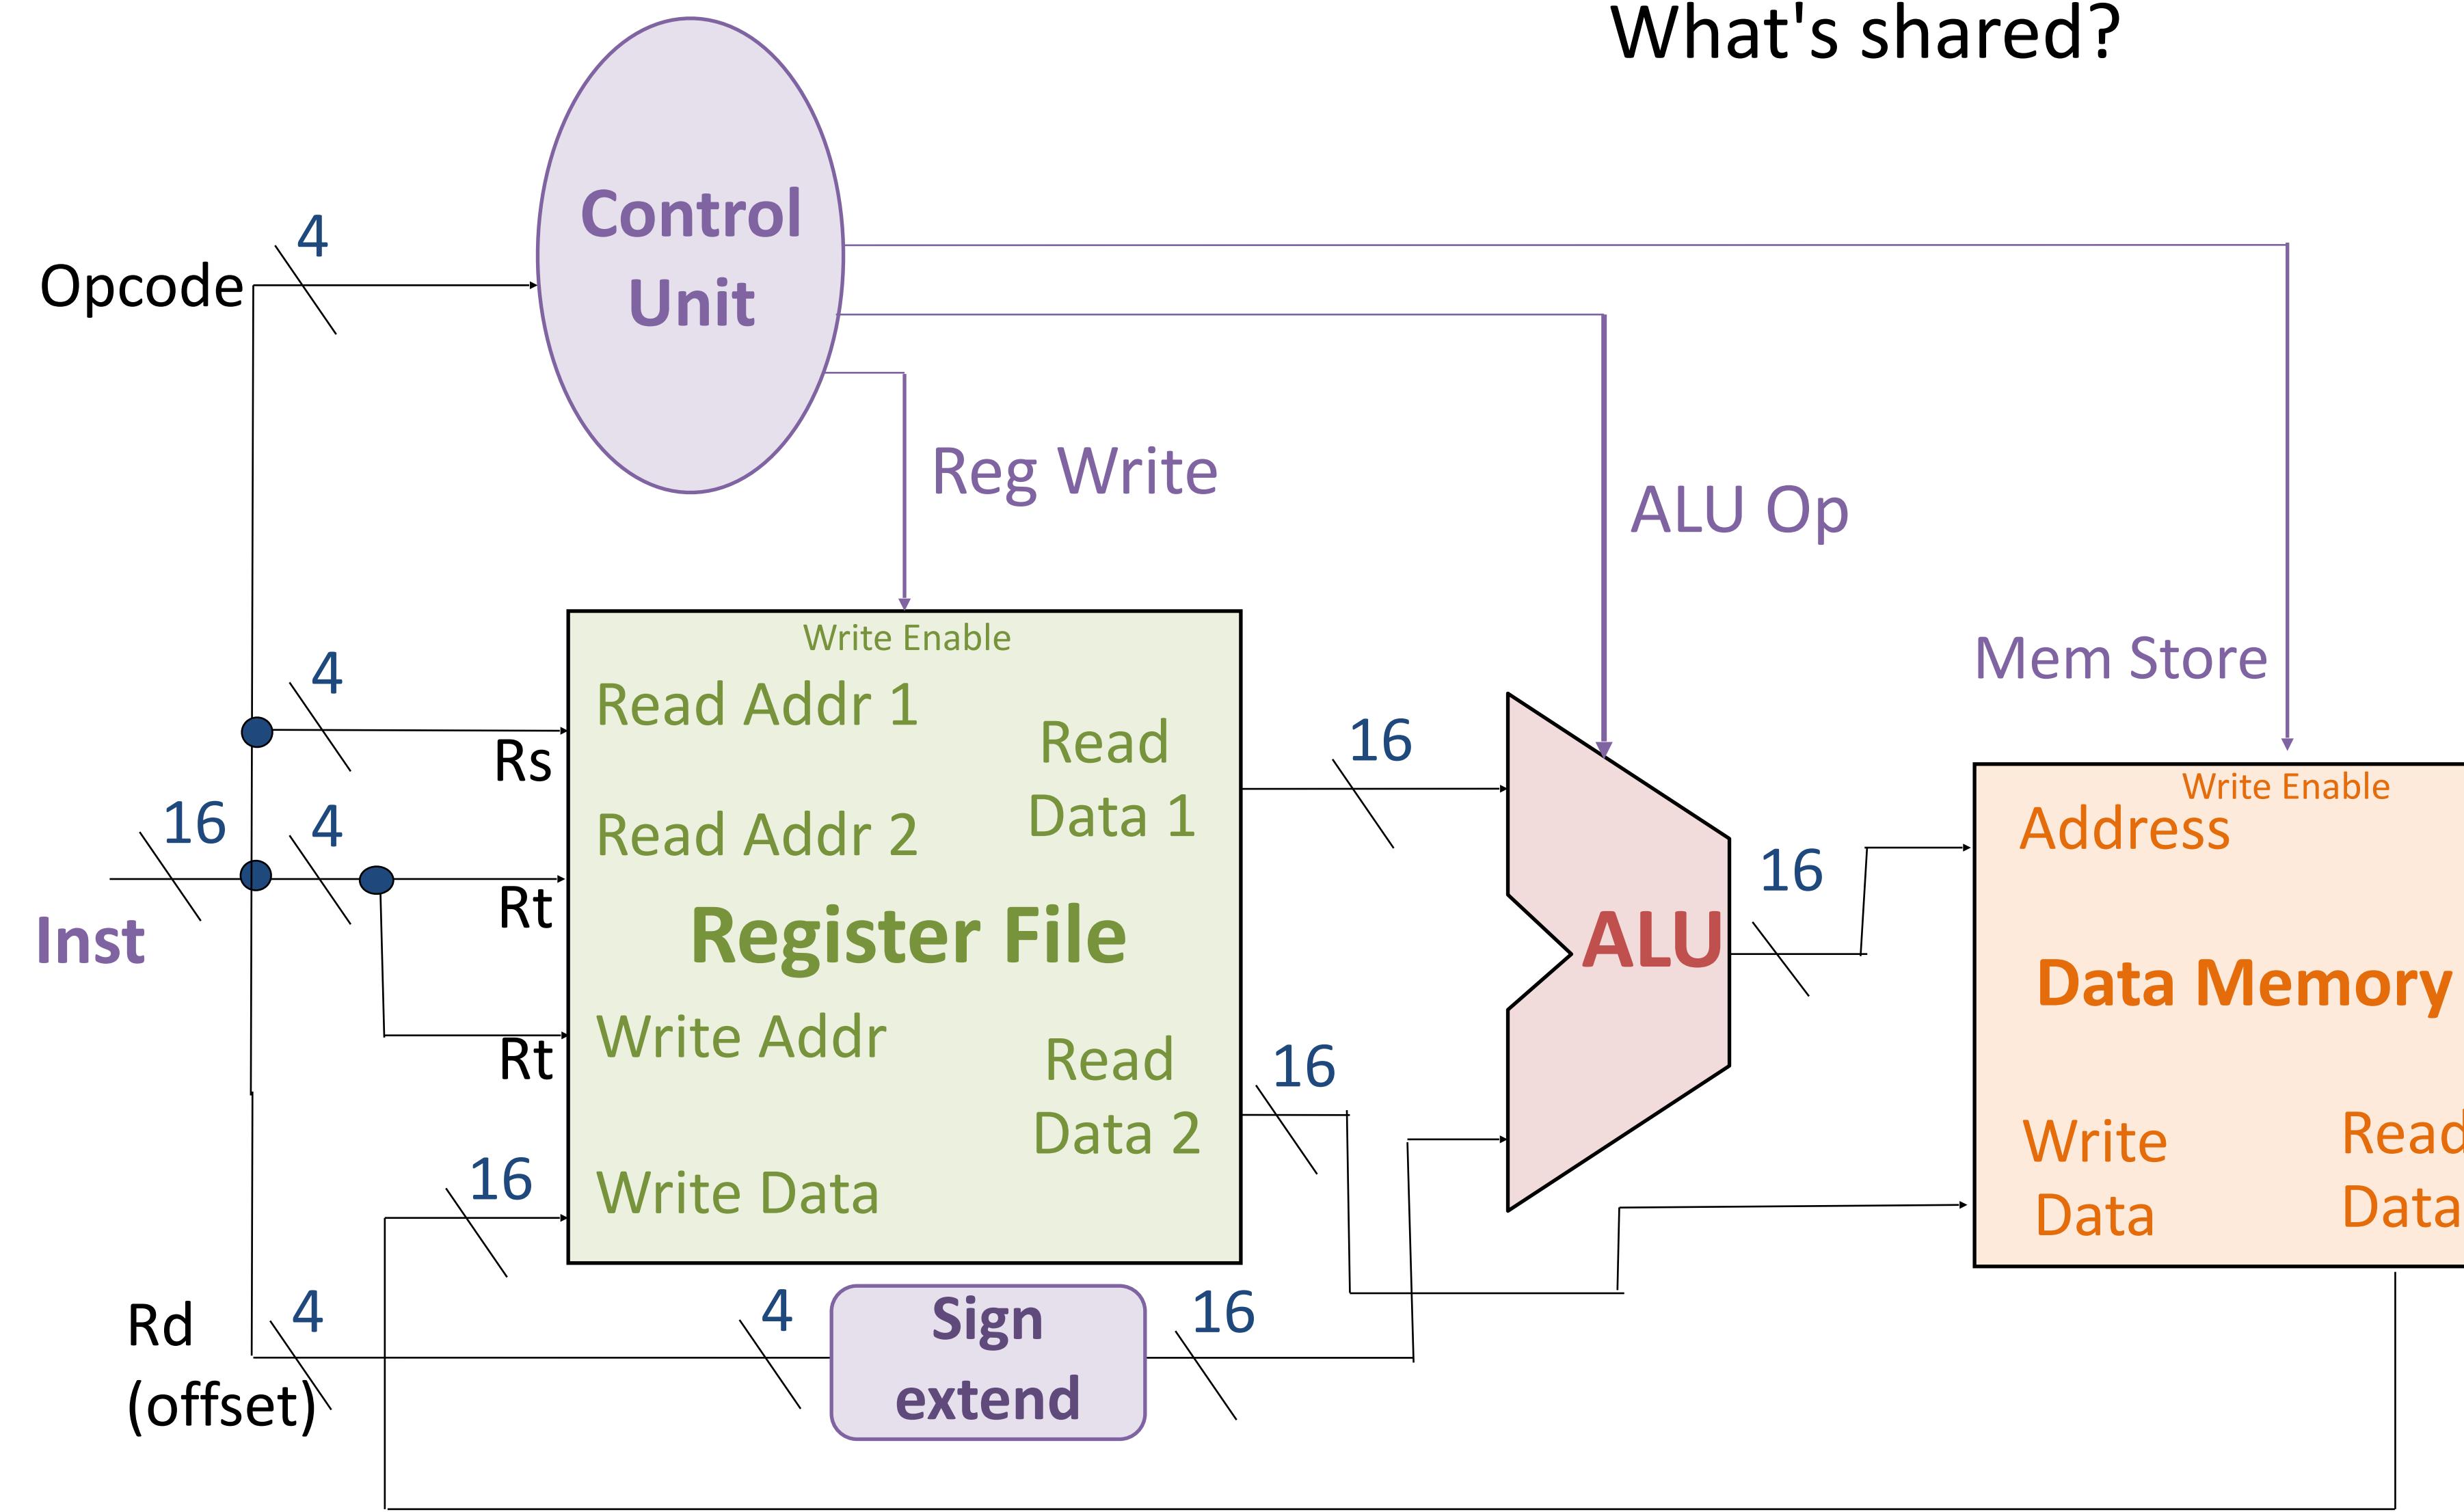


Arithmetic Instructions: Instruction Decode, Register Access, ALU

How can we support arithmetic
and memory instructions?

What's shared?

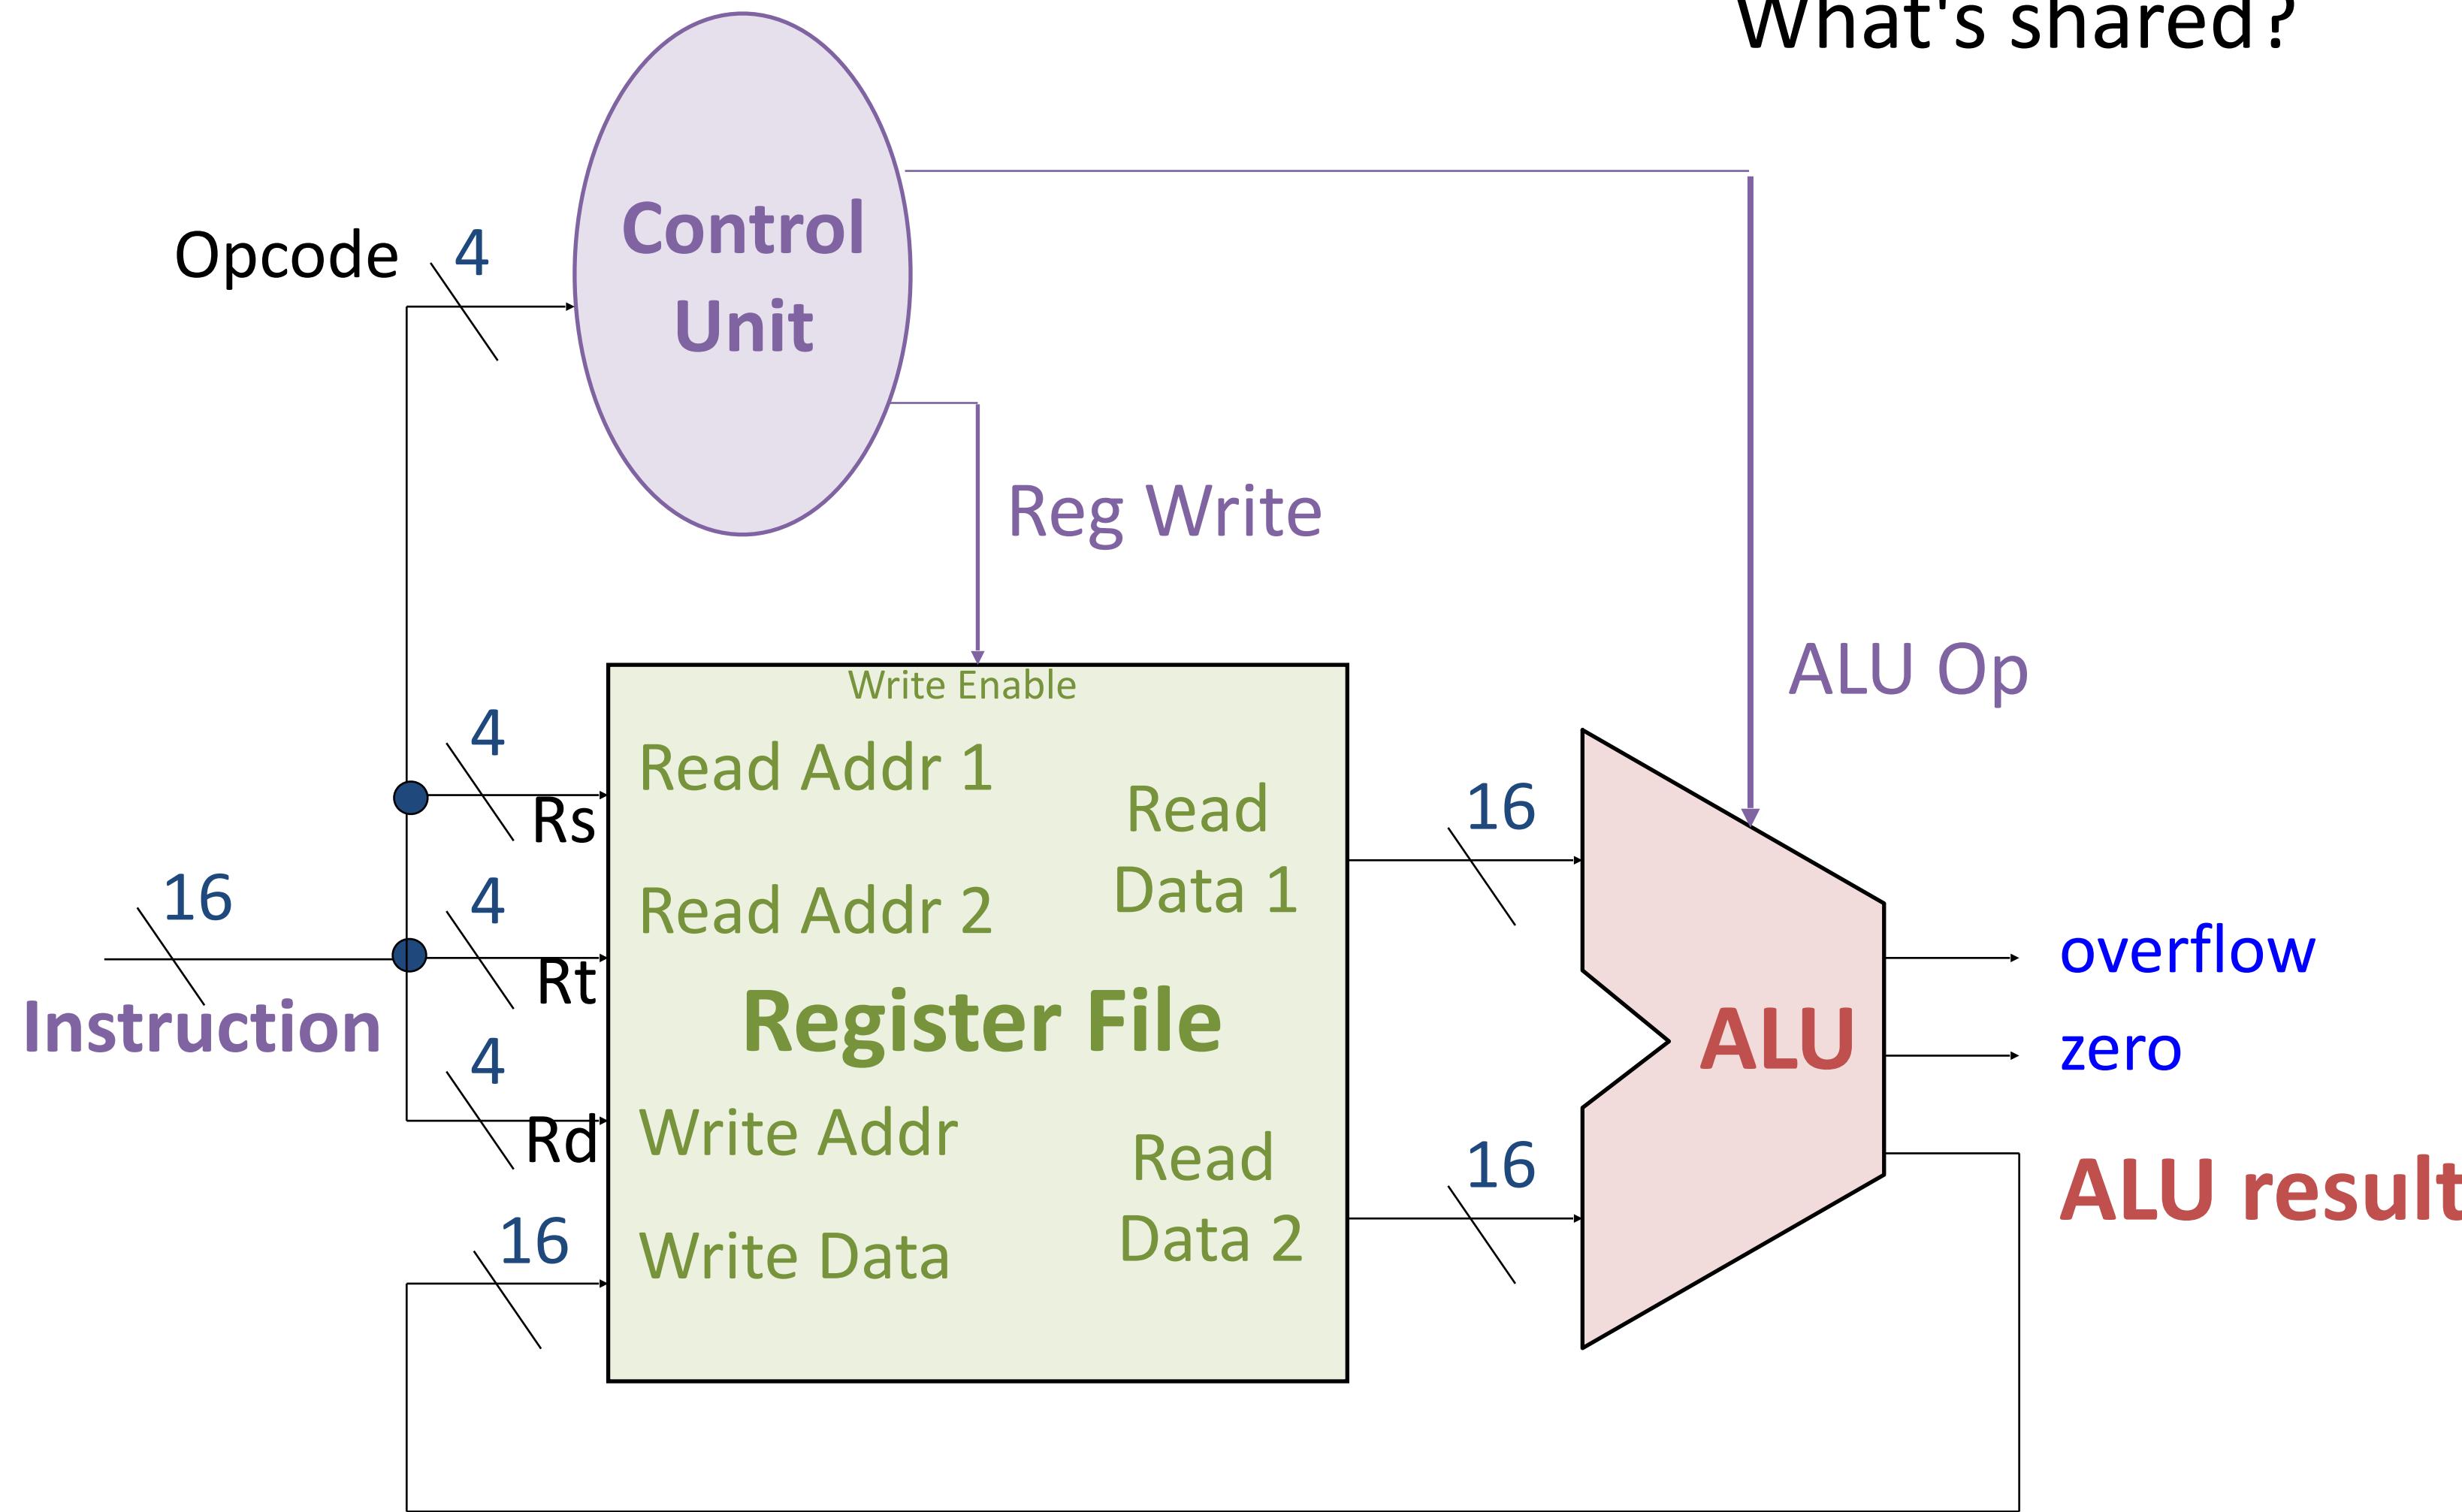

Choose between Arithmetic/Memory instructions with MUXes

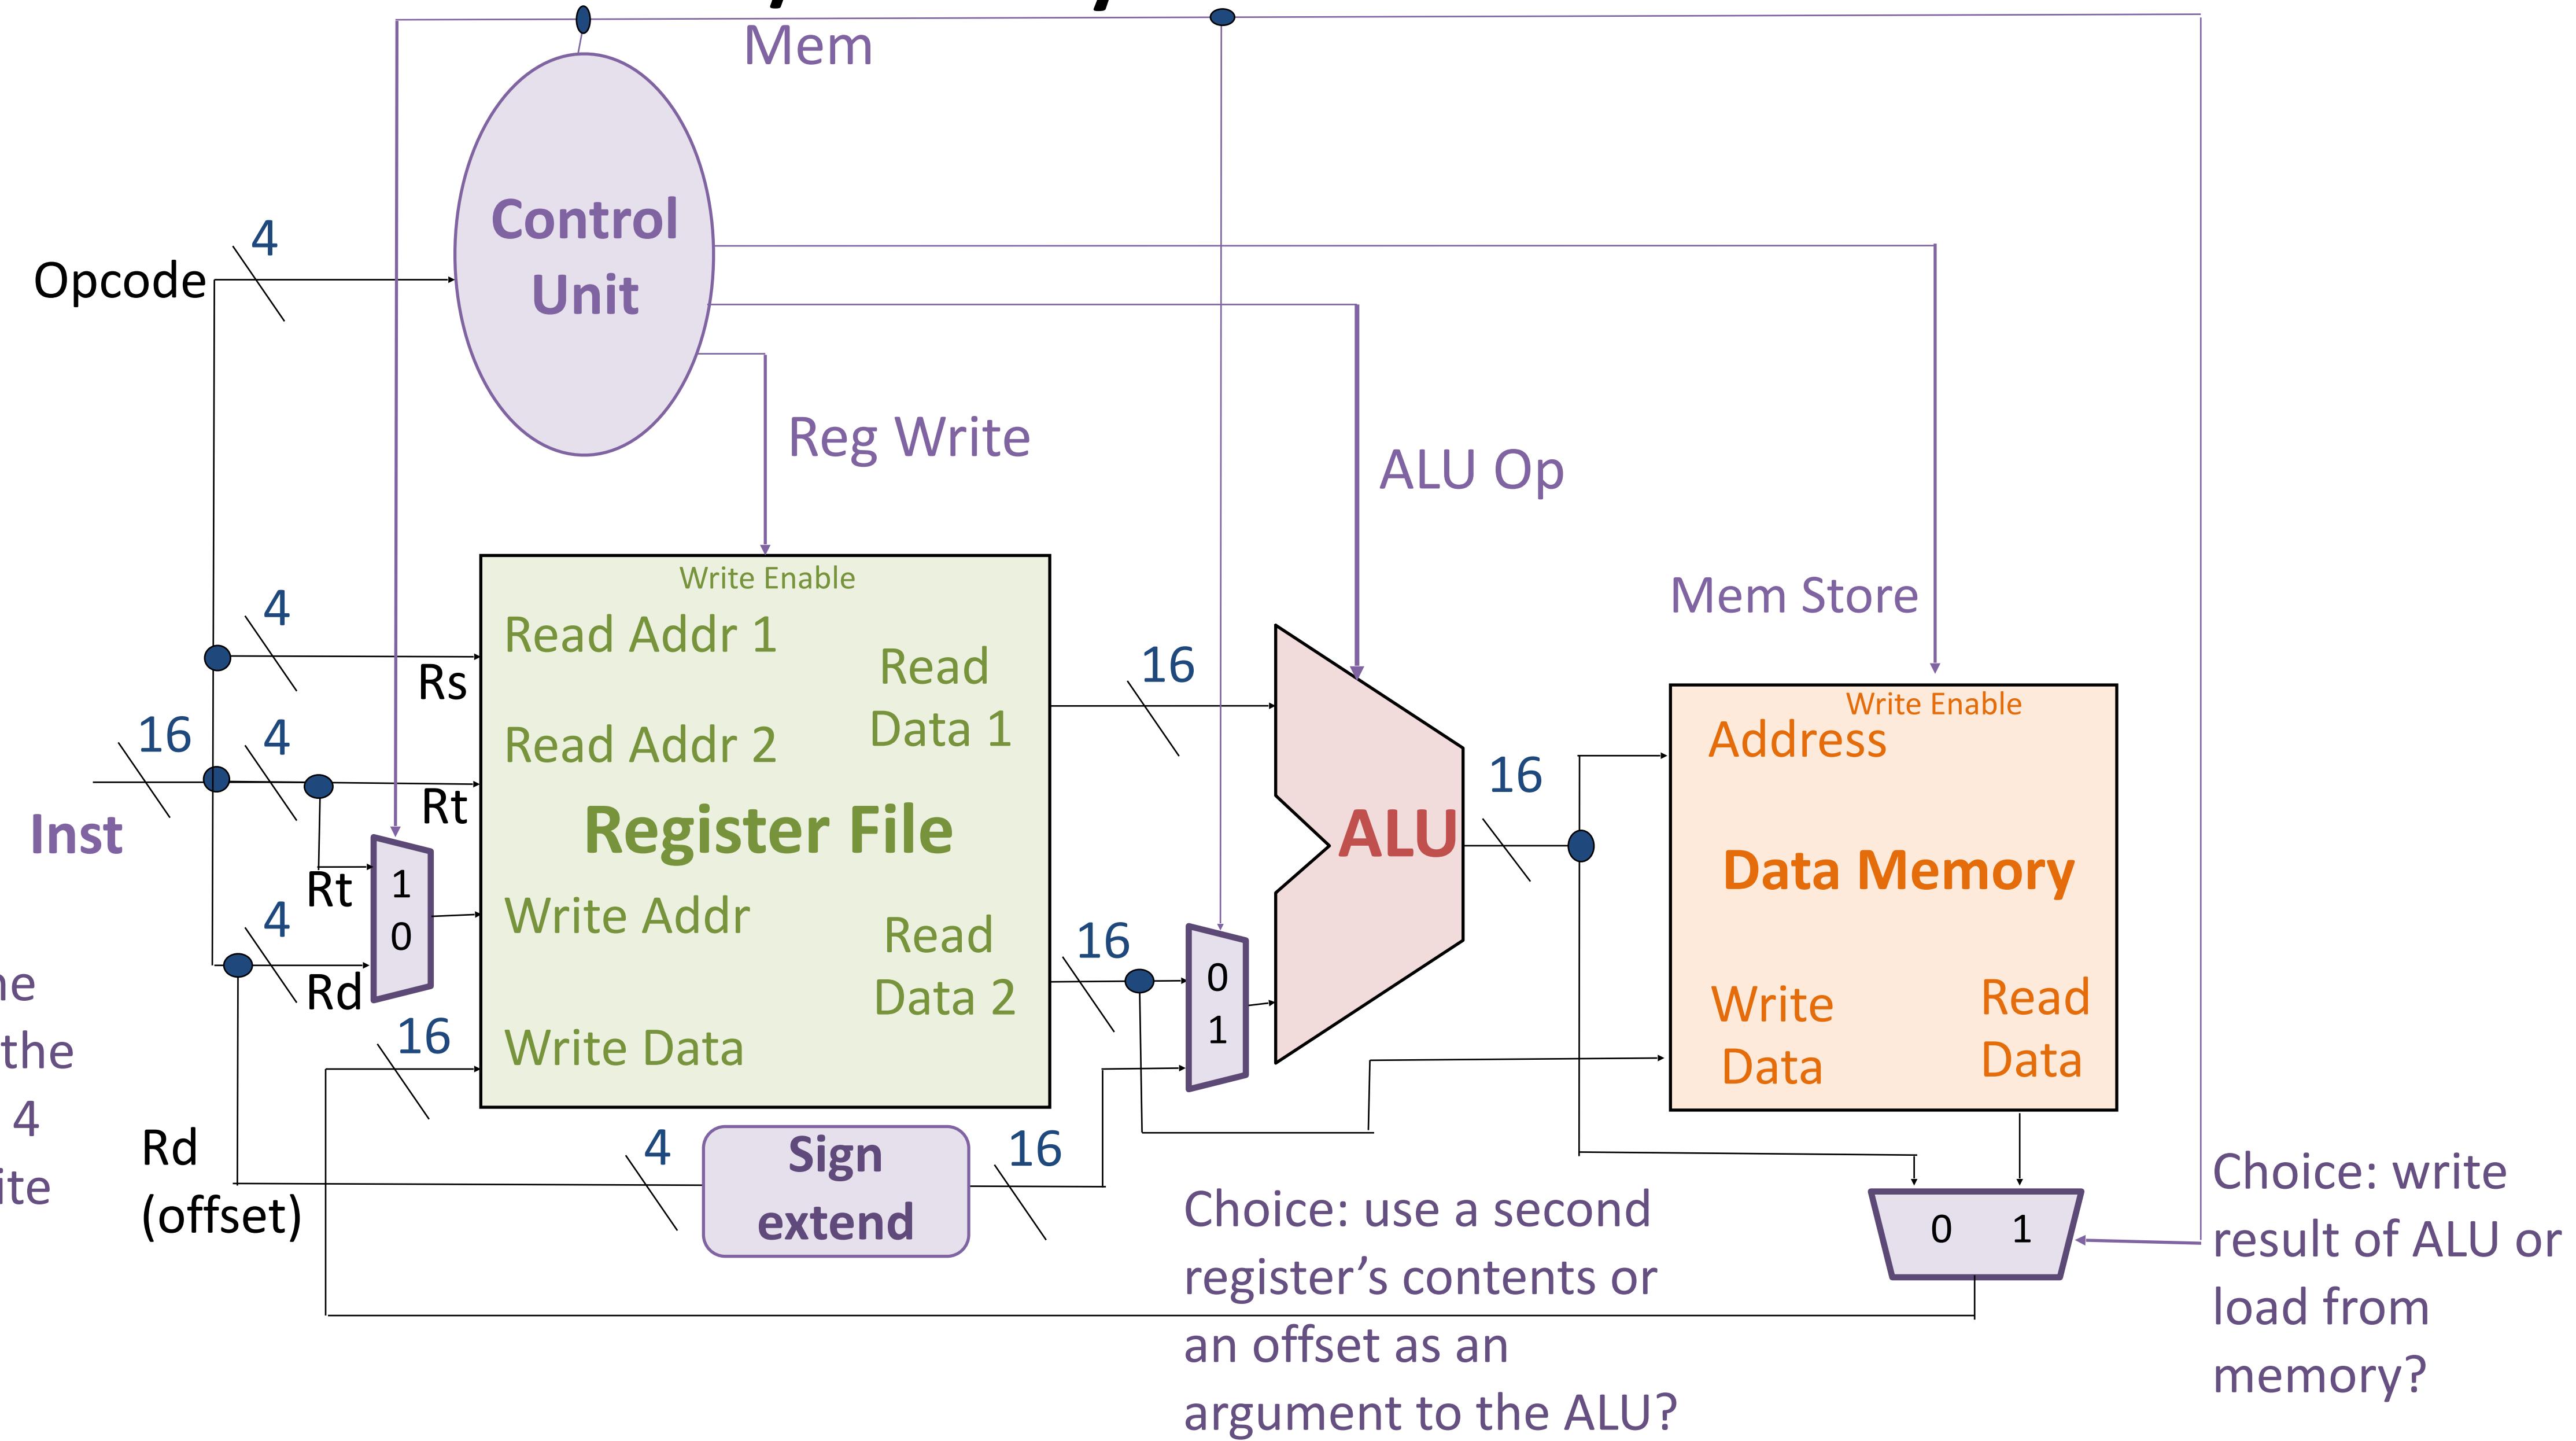

Choice: use the address from the middle or last 4 bits as the write address?

Choice: use a second register's contents or an offset as an argument to the ALU?

Choice: write result of ALU or load from memory?

Control-flow Instructions

16-bit Encoding


Instruction	Meaning	Op	Rs	Rt	Rd
BEQ $Rs, Rt, offset$	$If R[s] == R[t] then$ $PC \leftarrow PC + 2 + offset * 2$	0111	0-15	0-15	$offset$
...					

Example encoding:


BEQ R1, R2, -2

Op	Rs	Rt	Rd
0111	0001	0010	1110

Compute branch target for BEQ

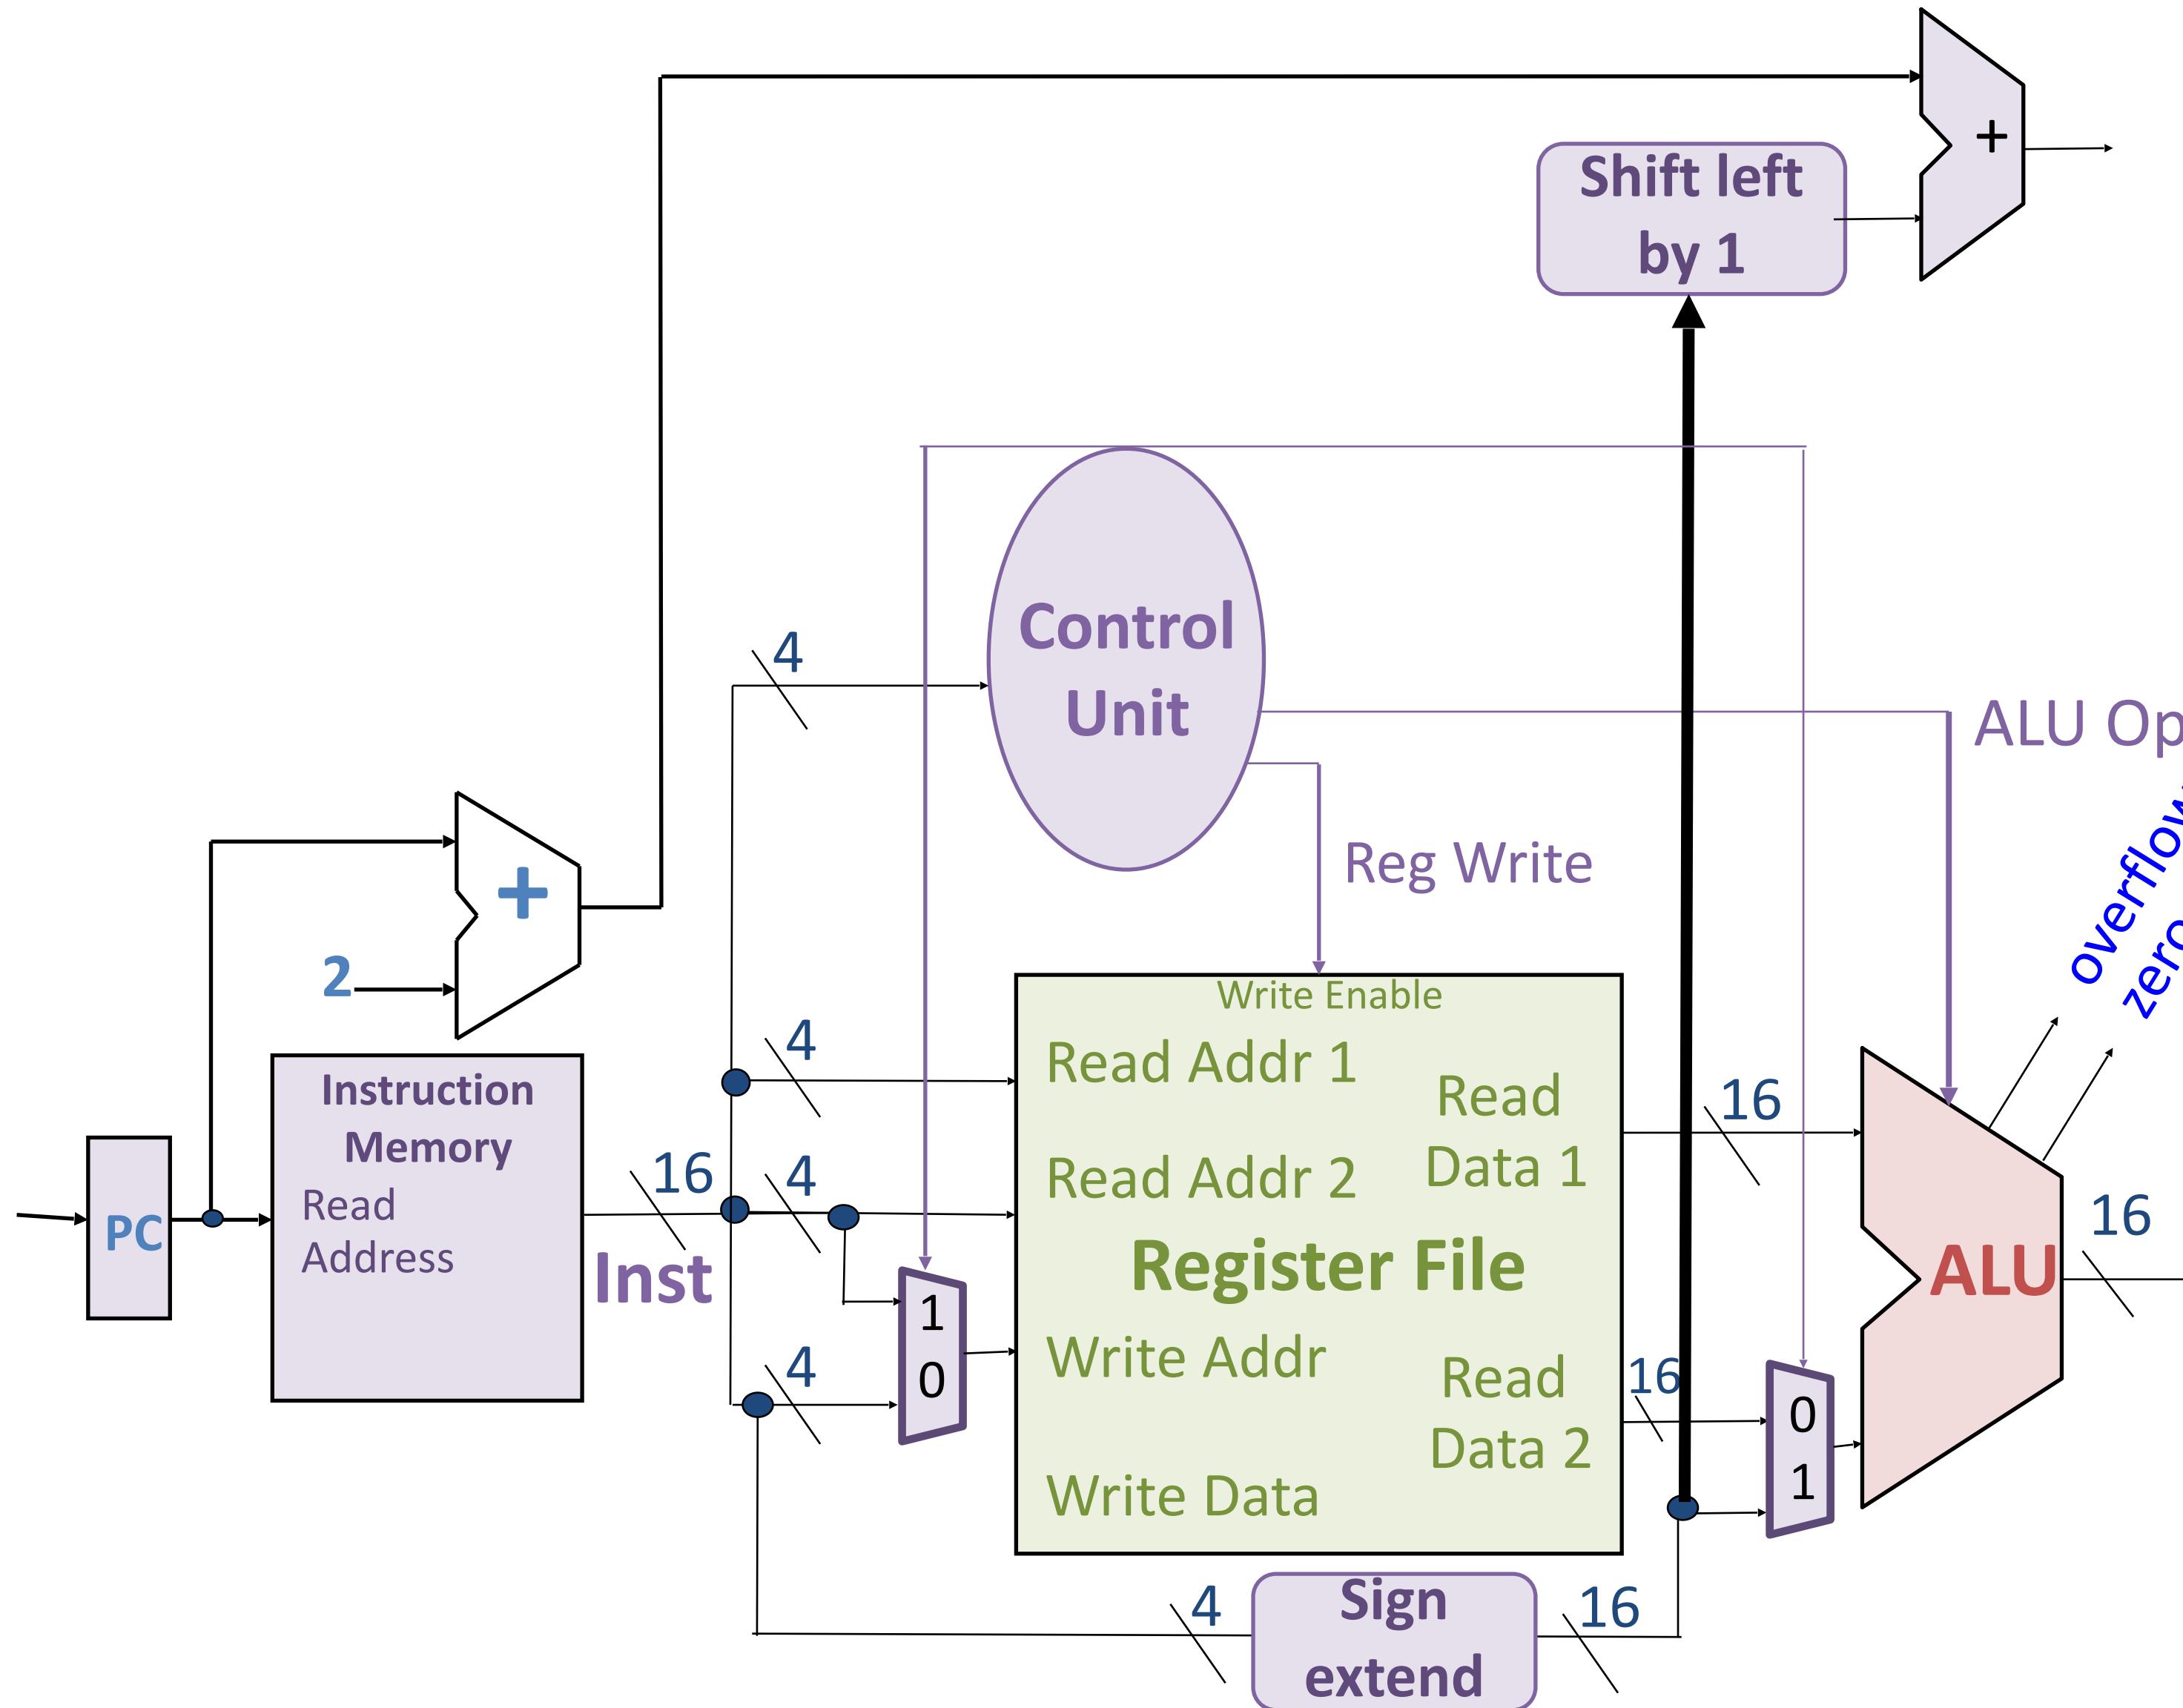

Make branch decision

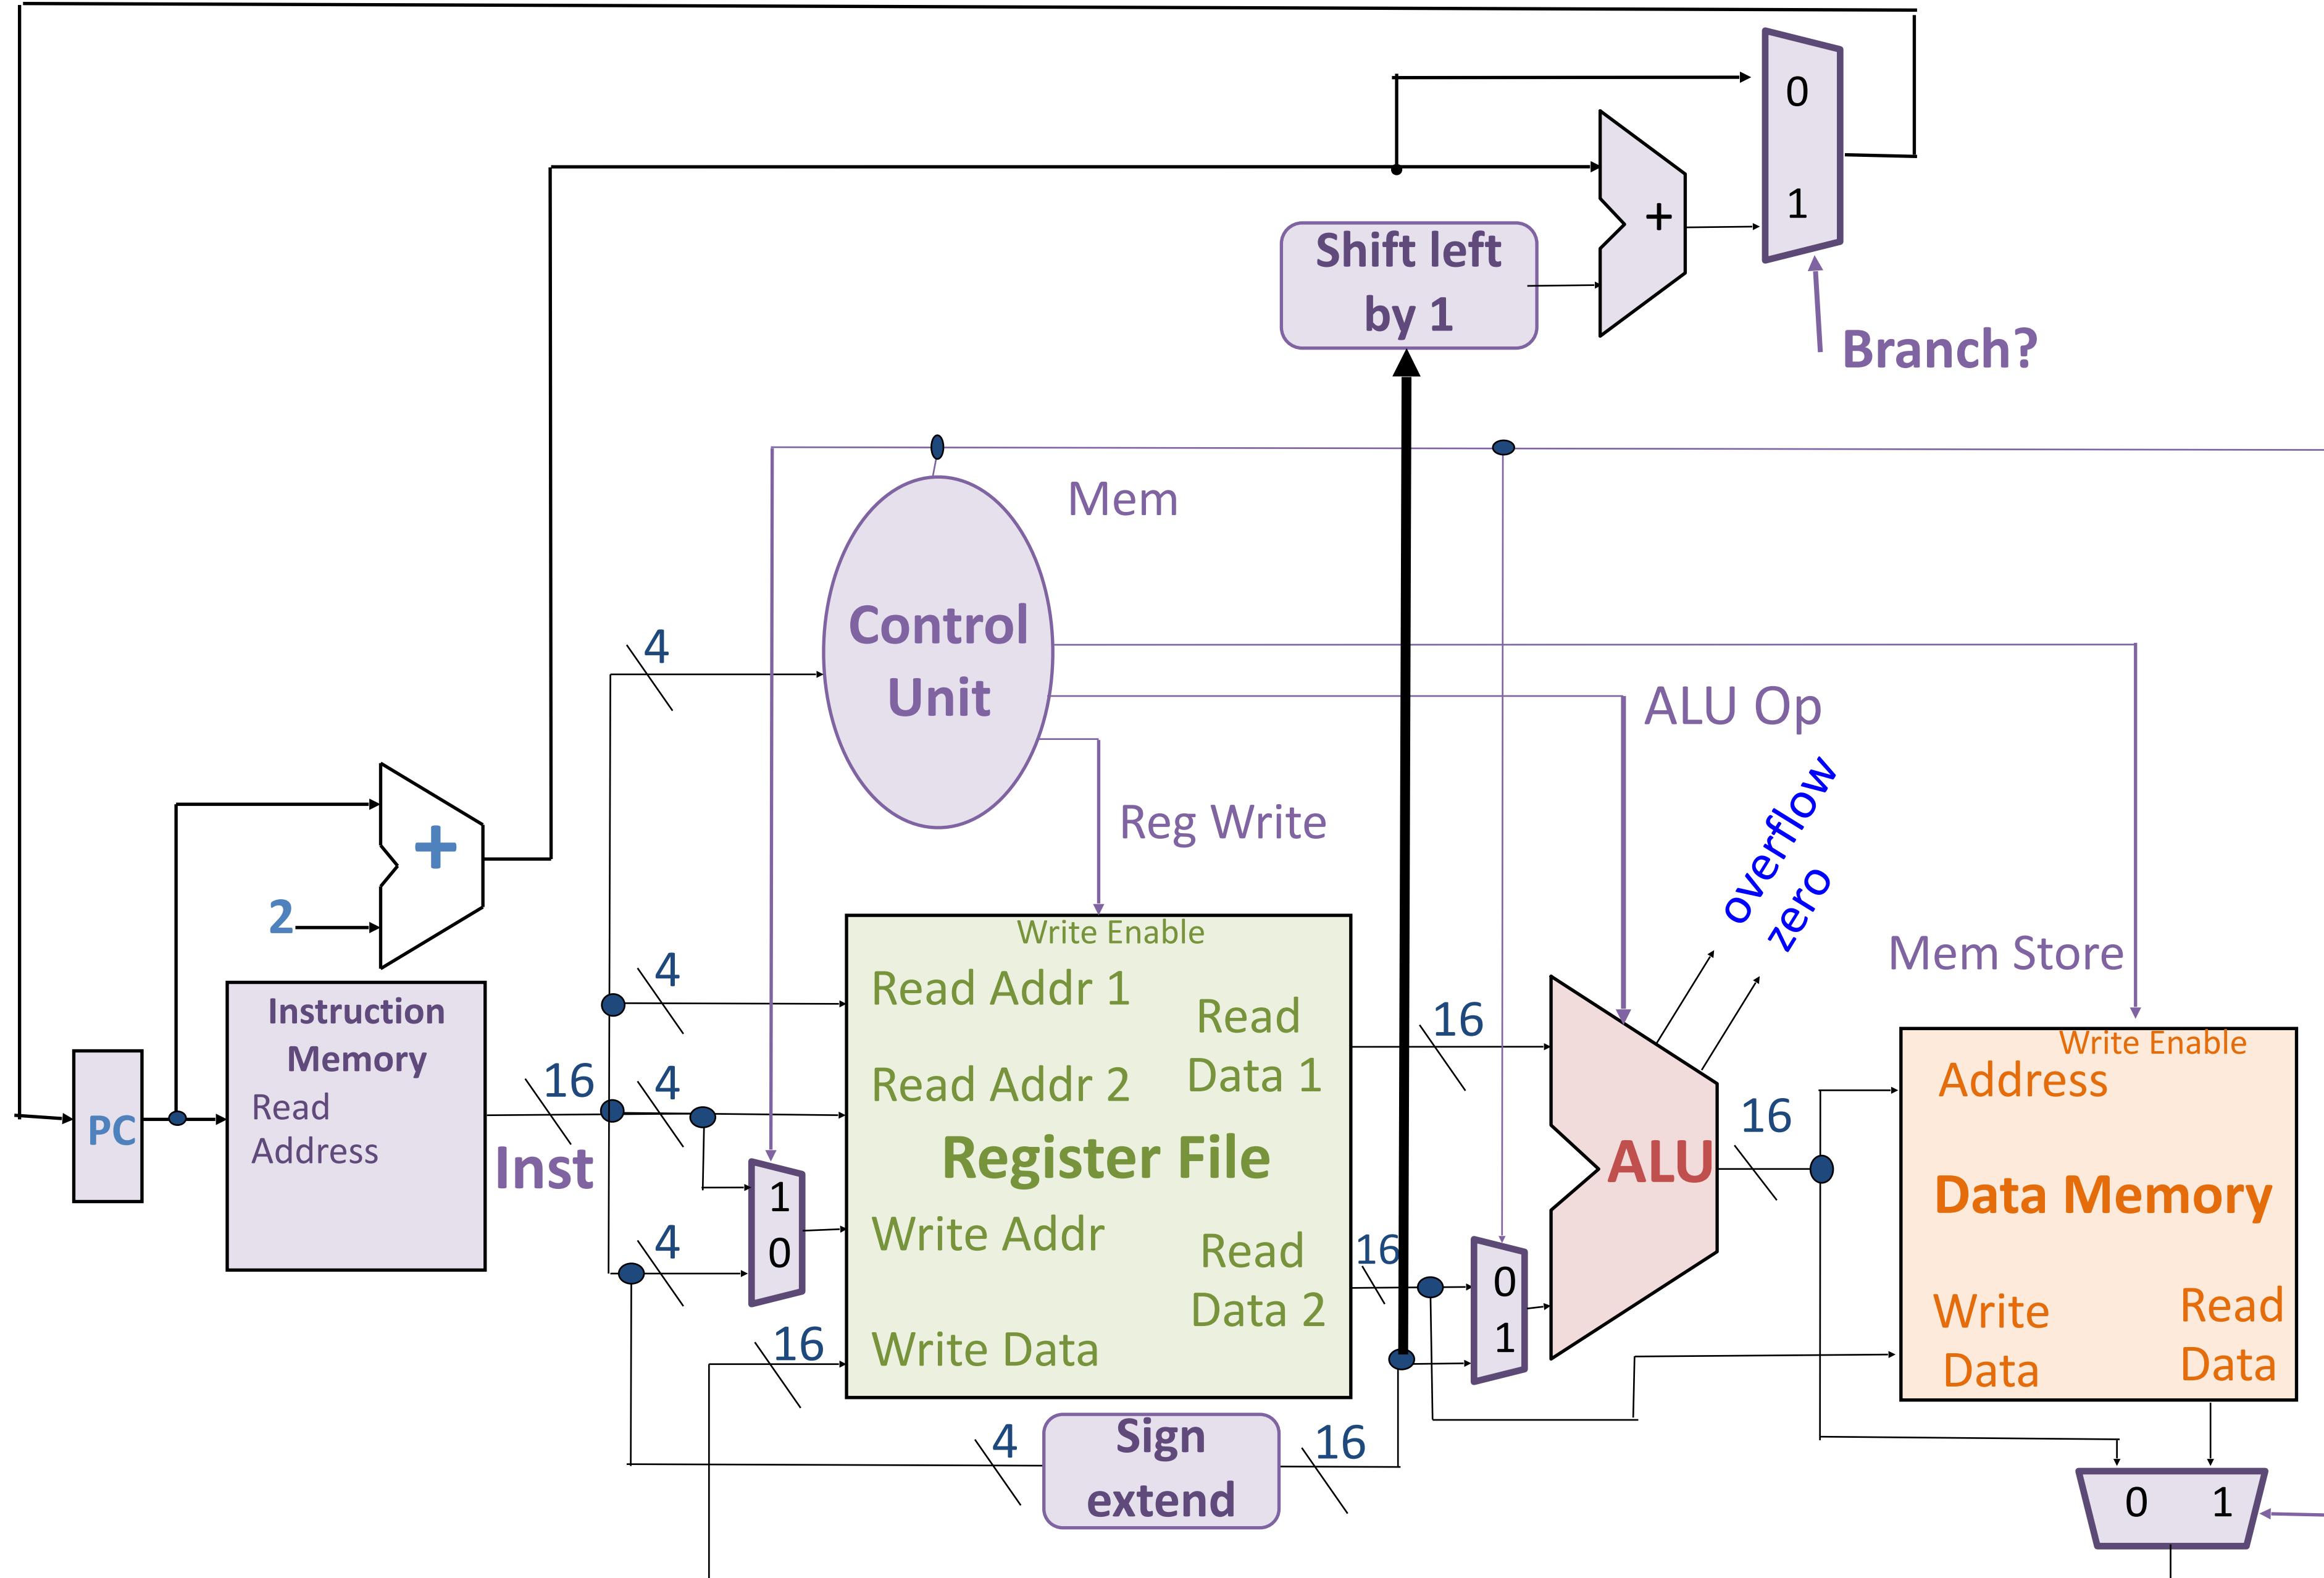

What's missing from what we covered in lecture?

- Details of Control Unit
 - ALU op is **not** instruction opcode; some translation needed
 - Reg Write bit (for ADD, SUB, AND, OR, LW)
 - Mem Store bit (for SW)
 - Mem bit (arithmetic/memory MUX bit)
 - Branch bit (for BEQ)
- Implementation of JMP
- Implementation of HALT (basically stops the clock running the computer; we won't implement this)

See Arch Assignment!

HW ARCH not the only implementation

Single-cycle architecture

- Relatively simple, (barely!) fits on a slide (and in our heads).
- Every instruction takes one clock cycle each.
- Slowest instruction determines minimum clock cycle.
- Inefficient.

Could it be better?

- Performance, energy, debugging, security, reconfigurability, ...
- Pipelining
- OoO: Out-of-order execution
- Caching
- ... enormous, interesting design space of **Computer Architecture**

Conclusion of unit: Computational Building Blocks (HW)

Lectures

- Digital Logic
- Data as Bits
- Integer Representation
- Combinational Logic
- Arithmetic Logic
- Sequential Logic
- A Simple Processor

Topics

- Transistors, digital logic gates
- Data representation with bits, bit-level computation
- Number representations, arithmetic
- Combinational and arithmetic logic
- Sequential (stateful) logic
- Computer processor architecture overview

Labs

- 1: Transistors to Gates
- 2: Data as Bits
- 3: Combinational Logic & Arithmetic
- 4: ALU & Sequential Logic
- 5: Processor Datapath

Assignments

- Gates
- Zero
- Bits
- Arch (out Thursday)

Mid-semester Exam 1: HW
October 16